

---

# ExtrIQ<sub>Line</sub>

---

## Eagle Digital Servo Drive Installation Guide



October 2017 (Ver. 1.904)



[www.elmomc.com](http://www.elmomc.com)

## Notice

This guide is delivered subject to the following conditions and restrictions:

- This guide contains proprietary information belonging to Elmo Motion Control Ltd. Such information is supplied solely for the purpose of assisting users of the Eagle servo drive in its installation.
- The text and graphics included in this manual are for the purpose of illustration and reference only. The specifications on which they are based are subject to change without notice.
- Elmo Motion Control and the Elmo Motion Control logo are registered trademarks of Elmo Motion Control Ltd.
- Information in this document is subject to change without notice.


Document no. MAN-EAGIG (Ver. 1.904)

Copyright © 2017

Elmo Motion Control Ltd.

All rights reserved.

## Catalog Number

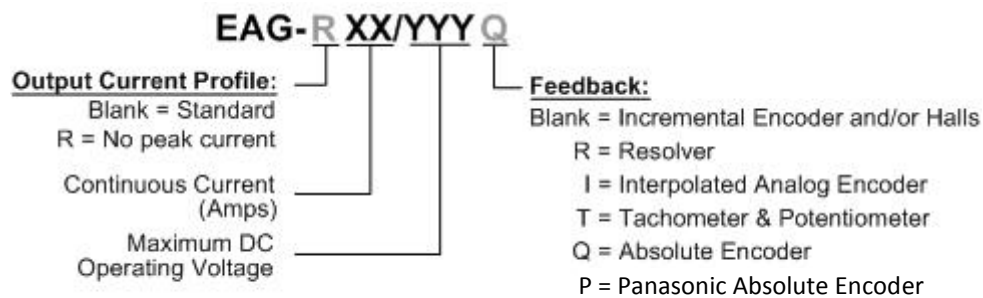

## Revision History

Version	Date	Details
<b>1.0</b>	June 2007	Initial release
<b>1.1</b>	April 2008	Updated Power Ratings Table in Chapter 4 (Appendix)
<b>1.2</b>	May 2008	Following sections added: 3.4.2.2 Connecting the DC Power; 3.5 DC Power Supply; 3.6 Heat Dissipation
<b>1.3</b>	December 2008	MTCR 00-100-30: Auxiliary power supply is mandatory for Eagle XX/400 drives
<b>1.4</b>	May 2009	MTCR 05-009-54: Section 3.4.2.2.a: Expanded the XX/400 note; Section 4.3: Added auxiliary power data for EAG 18/400.
<b>1.5</b>	October 2010	MTCR 10-01-10: Correction in Table 16
<b>1.6</b>	July 2011	Applied new template
<b>1.7</b>	September 2012	PR changed to VN- Formatted according to the new template “Metronome” was replaced by the “Composer” software.
<b>1.701</b>	January 2013	Added a caution and recommendation on the type of cleaning solution to use for the Elmo unit.
<b>1.800</b>	May 2013	Addition of options: 100/60 and 100/100
<b>1.900</b>	Nov 2013	Correction to Safety Connection VN- on page 31
<b>1.901</b>	January 2014	Updated Section 3.4.2.2.a : Operation with an Isolated DC Power Supply, Section 3.4.2.2.b: Operation with an Isolated Battery Power Supply and Section 3.4.2.2.d: Operation with a Non-Isolated DC Power Supply by Auto Transformer
<b>1.902</b>	July 2014	General changes to specifications
<b>1.904</b>	Oct. 2017	Updated the Warranty Information section 1.5 and the part number label in section 3.2.

## **Elmo Worldwide**

### **Head Office**

#### **Elmo Motion Control Ltd.**

60 Amal St., P.O. Box 3078, Petach Tikva 4951360  
Israel

Tel: +972 (3) 929-2300 • Fax: +972 (3) 929-2322 • [info-il@elmomc.com](mailto:info-il@elmomc.com)

### **North America**

#### **Elmo Motion Control Inc.**

42 Technology Way, Nashua, NH 03060  
USA

Tel: +1 (603) 821-9979 • Fax: +1 (603) 821-9943 • [info-us@elmomc.com](mailto:info-us@elmomc.com)

### **Europe**

#### **Elmo Motion Control GmbH**

Hermann-Schwer-Strasse 3, 78048 VS-Villingen  
Germany

Tel: +49 (0) 7721-944 7120 • Fax: +49 (0) 7721-944 7130 • [info-de@elmomc.com](mailto:info-de@elmomc.com)

### **China**

#### **Elmo Motion Control Technology (Shanghai) Co. Ltd.**

Room 1414, Huawen Plaza, No. 999 Zhongshan West Road, Shanghai (200051)  
China

Tel: +86-21-32516651 • Fax: +86-21-32516652 • [info-asia@elmomc.com](mailto:info-asia@elmomc.com)

### **Asia Pacific**

#### **Elmo Motion Control APAC Ltd.**

B-601 Pangyo Innovalley, 621 Sampyeong-dong, Bundang-gu, Seongnam-si, Gyeonggi-do,  
South Korea (463-400)

Tel: +82-31-698-2010 • Fax: +82-31-801-8078 • [info-asia@elmomc.com](mailto:info-asia@elmomc.com)

## ***Table of Contents***

<b>Chapter 1: Safety Information .....</b>	<b>8</b>
1.1. Warnings.....	9
1.2. Cautions.....	9
1.3. Directives and Standards.....	10
1.4. CE Marking Conformance.....	11
1.5. Warranty Information .....	11
<b>Chapter 2: Product Description .....</b>	<b>12</b>
2.1. <i>ExtrIQ</i> Product Family.....	12
2.2. Drive Description.....	13
2.3. Product Features .....	14
2.3.1. Current Control.....	14
2.3.2. Velocity Control .....	14
2.3.3. Position Control .....	14
2.3.4. Communication Options.....	14
2.3.5. Feedback Options.....	15
2.3.6. Fault Protection .....	15
2.4. System Architecture .....	16
2.5. How to Use this Guide.....	16
<b>Chapter 3: Installation .....</b>	<b>18</b>
3.1. Before You Begin .....	18
3.1.1. Site Requirements .....	18
3.1.2. Hardware Requirements .....	18
3.2. Unpacking the Drive Components.....	20
3.3. Mounting the Eagle .....	21
3.4. Connecting the Cables.....	22
3.4.1. Wiring the Eagle.....	22
3.4.2. Connecting the Power Cables.....	25
3.4.2.1. Connecting the Motor Cable .....	27
3.4.2.2. Connecting the DC Power.....	28
3.4.2.3. Connecting the Optional Backup Supply Cable .....	31
3.4.3. Feedback Control and Communication Cable Assemblies .....	33
3.4.4. Main Feedback Cable (Feedback A).....	33
3.4.5. Main and Auxiliary Feedback Combinations .....	46
3.4.6. Auxiliary Feedback (Feedback B) .....	47
3.4.6.1. Main Encoder Buffered Outputs or Emulated Encoder Outputs Option on Feedback B (YA[4]=4).....	48
3.4.6.2. Differential Auxiliary Encoder Input Option on Feedback B (YA[4]=2) .....	50
3.4.6.3. Single-Ended Auxiliary Input Option on Feedback B (YA[4]=2) ....	52

3.4.6.4.	Pulse-and-Direction Input Option on Feedback B (YA[4]=0) .....	54
3.4.7.	I/O Cables .....	58
3.4.7.1.	General I/O Port (J3).....	58
3.4.8.	Communication Cables.....	60
3.4.8.1.	RS-232 Communication .....	60
3.4.8.2.	CAN Communication.....	61
3.5.	DC Power Supply .....	63
3.5.1.	Powering Up .....	63
3.5.2.	Initializing the System.....	63
3.6.	Heat Dissipation.....	64
3.6.1.	Eagle Thermal Data.....	64
3.6.2.	Heat Dissipation Data .....	65
3.6.3.	How to Use the Charts.....	67
<b>Chapter 4: Technical Specifications .....</b>		<b>68</b>
4.1.	Features.....	68
4.1.1.	Motion Control Modes .....	68
4.1.2.	Advanced Positioning Control Modes .....	68
4.1.3.	Advanced Filters and Gain Scheduling.....	68
4.1.4.	Fully Programmable.....	68
4.1.5.	Feedback Options .....	69
4.1.6.	Input/Output .....	69
4.1.7.	Built-In Protection .....	70
4.1.8.	Accessories .....	70
4.1.9.	Automatic Procedures .....	71
4.2.	Dimensions .....	71
4.3.	Power Ratings up to 100 V .....	72
4.1.	Power Ratings from 200 to 400 V.....	73
4.1.1.	Auxiliary Supply .....	73
4.2.	Environmental Conditions.....	74
4.3.	Control Specifications.....	75
4.3.1.	Current Loop.....	75
4.3.2.	Velocity Loop .....	76
4.3.3.	Position Loop .....	76
4.4.	Feedbacks.....	77
4.4.1.	Feedback Supply Voltage.....	77
4.4.2.	Main Feedback Options.....	77
4.4.2.1.	Incremental Encoder Input.....	77
4.4.2.2.	Digital Halls .....	78
4.4.2.3.	Interpolated Analog (Sine/Cosine) Encoder .....	78
4.4.2.4.	Resolver .....	79
4.4.2.5.	Tachometer.....	79
4.4.2.6.	Potentiometer .....	80
4.4.2.7.	Absolute Encoder.....	80
4.4.2.8.	Encoder Outputs.....	81



4.4.3.	Auxiliary Port .....	82
4.5.	I/Os .....	83
4.5.1.	Digital Input Interfaces .....	83
4.5.2.	Digital Output Interface .....	84
4.5.3.	Analog Input .....	84
4.6.	Communications.....	85
4.7.	Pulse-Width Modulation (PWM) .....	85
4.8.	Compliance with Standards.....	86

## ***Chapter 1: Safety Information***

In order to achieve the optimum, safe operation of the Eagle servo drives, it is imperative that you implement the safety procedures included in this installation guide. This information is provided to protect you and to keep your work area safe when operating the Eagle as well as the accompanying equipment.

**Please read this chapter carefully before you begin the installation process.**

Before you start, ensure that all system components are connected to earth ground. Electrical safety is provided through a low-resistance earth connection.

Only qualified personnel may install, adjust, maintain and repair the servo drive. A “qualified person” has the knowledge and authorization to perform tasks such as transporting, assembling, installing, commissioning and operating motors.

The Eagle servo drives contain electrostatic-sensitive components that can be damaged if handled incorrectly. To prevent any electrostatic damage, avoid contact with highly insulating materials, such as plastic film and synthetic fabrics. Place the product on a conductive surface and ground yourself in order to discharge any possible static electricity build-up.

To avoid any potential hazards that may cause severe personal injury or damage to the product during operation, keep all covers and cabinet doors shut.

The following safety symbols are used in this manual:



**Warning:**

This information is needed to avoid a safety hazard, which might cause bodily injury.



**Caution:**

This information is necessary for preventing damage to the product or to other equipment.





## 1.1. Warnings

- To avoid electric arcing and hazards to personnel and electrical contacts, never connect/disconnect the servo drive while the power source is on.
- Power cables can carry a high voltage, even when the motor is not in motion. Disconnect the Eagle from all voltage sources before it is opened for servicing.
- The Eagle servo drives contain grounding conduits for electric current protection. Any disruption to these conduits may cause the instrument to become hot (live) and dangerous.
- After shutting off the power and removing the power source from your equipment, wait at least 1 minute before touching or disconnecting parts of the equipment that are normally loaded with electrical charges (such as capacitors or contacts). Measuring the electrical contact points with a meter, before touching the equipment, is recommended.



## 1.2. Cautions

- The Eagle servo drives contain hot surfaces and electrically-charged components during operation.
- The maximum DC power supply connected to the instrument must comply with the parameters outlined in this guide.
- When connecting the Eagle to an approved  $24 \pm 20\%$  VDC auxiliary power supply, connect it through a line that is separated from hazardous live voltages using reinforced or double insulation in accordance with approved safety standards.
- Before switching on the Eagle, verify that all safety precautions have been observed and that the installation procedures in this manual have been followed.
- Do not clean any of the Eagle drive's soldering with solvent cleaning fluids of pH greater than 7 (8 to 14). The solvent corrodes the plastic cover causing cracks and eventual damage to the drive's PCBs.

Elmo recommends using the cleaning fluid Vigon-EFM which is pH Neutral (7).

For further technical information on this recommended cleaning fluid, select the link:

[http://www.zestron.com/fileadmin/zestron.com-usa/daten/electronics/Product\\_TI1s/TI1-VIGON\\_EFM-US.pdf](http://www.zestron.com/fileadmin/zestron.com-usa/daten/electronics/Product_TI1s/TI1-VIGON_EFM-US.pdf)

### 1.3. Directives and Standards

The Eagle conforms to the following industry safety standards:

Safety Standard	Item
Approved <b>IEC/EN 61800-5-1, Safety</b>	Adjustable speed electrical power drive systems
Recognized <b>UL 508C</b>	Power Conversion Equipment
In compliance with <b>UL 840</b>	Insulation Coordination Including Clearances and Creepage Distances for Electrical Equipment
In compliance with <b>UL 60950-1</b> (formerly <b>UL 1950</b> )	Safety of Information Technology Equipment Including Electrical Business Equipment
In compliance with <b>EN 60204-1</b>	Low Voltage Directive 73/23/EEC

The Eagle servo drives have been developed, produced, tested and documented in accordance with the relevant standards. Elmo Motion Control is not responsible for any deviation from the configuration and installation described in this documentation. Furthermore, Elmo is not responsible for the performance of new measurements or ensuring that regulatory requirements are met.

## 1.4. CE Marking Conformance

The Eagle servo drives are intended for incorporation in a machine or end product. The actual end product must comply with all safety aspects of the relevant requirements of the European Safety of Machinery Directive 98/37/EC as amended, and with those of the most recent versions of standards **EN60204-1** and **EN292-2** at the least.

According to Annex III of Article 13 of Council Directive 93/68/EEC, amending Council Directive 73/23/EEC concerning electrical equipment designed for use within certain voltage limits, the Eagle meet the provisions outlined in Council Directive 73/23/EEC. The party responsible for ensuring that the equipment meets the limits required by EMC regulations is the manufacturer of the end product.

## 1.5. Warranty Information

The products covered in this manual are warranted to be free of defects in material and workmanship and conform to the specifications stated either within this document or in the product catalog description. All Elmo drives are warranted for a period of 12 months from the date of shipment. No other warranties, expressed or implied — and including a warranty of merchantability and fitness for a particular purpose — extend beyond this warranty.

## Chapter 2: Product Description

This installation guide describes the Eagle servo drives and the steps for its wiring, installation and power-up. Following these guidelines ensures maximum functionality of the drive and the system to which it is connected.

### 2.1. *ExtriQ* Product Family

Elmo Motion Control's *ExtriQ* product family is a set of durable motion control products for applications operating under extreme environmental conditions. The products are capable of withstanding the following extreme conditions:

Feature	Operation Conditions	Range
<b>Ambient Temperature Range</b>	Non-operating conditions	-50 °C to +100 °C (-58 °F to 212 °F)
	Operating conditions	-40 °C to +70 °C (-40 °F to 160 °F)
<b>Temperature Shock</b>	Non-operating conditions	-40 °C to +70 °C (-40 °F to 160 °F) within 3 min
<b>Altitude</b>	Non-operating conditions	Unlimited
	Operating conditions	-400 m to 12,000 m (-1312 to 39370 feet)
<b>Humidity</b>	Non-operating conditions	Up to 95% non-condensing humidity at 35 °C (95 °F)
	Operating conditions	Up to 95% non-condensing humidity at 25 °C (77 °F), up to 90% non-condensing humidity at 42 °C (108 °F)
<b>Vibration</b>	Operating conditions	20 Hz to 2000 Hz, 14.6g
<b>Mechanical Shock</b>	Non-operating conditions	±40g; Half sine, 11 msec
	Operating conditions	±20g; Half sine, 11 msec

*ExtriQ* products have a high power density in the range of 10 W – 65 kW and current carrying capacity of up to 100 A (200 A peak). *ExtriQ* has been tested using methods and procedures specified in a variety of extended environmental conditions (EEC) standards.

Based on Elmo Motion Control's innovative *ExtriQ* core technology, they support a wide range of motor feedback options, programming capabilities and communication protocols.

## 2.2. Drive Description

The Eagle series are highly resilient digital servo drives designed to deliver the highest density of power and intelligence. The Eagle delivers up to **9.6 kW of continuous power** or **15.8 kW of peak power** in a compact package.

Designed for OEMs, the Eagle is part of the Elmo's **ExtriQ** product line designed to endure extended environmental operating conditions. The digital drives are based on Elmo's advanced **ExtriQ** motion control technology. They operate from a DC power source in current, velocity, position and advanced position modes, in conjunction with a permanent-magnet synchronous brushless motor, DC brush motor, linear motor or voice coil. They are designed for use with any type of sinusoidal and trapezoidal commutation, with vector control. The Eagle can operate as a stand-alone device or as part of a multi-axis system in a distributed configuration on a real-time network.

The drives are easily set up and tuned using Elmo's *Composer* software tools. This Windows-based application enables users to quickly and simply configure the servo drive for optimal use with their motor. The Eagle, as part of the **ExtriQ** product line, are fully programmable with Elmo *Composer* motion control language.

The Eagle operates from a DC power source in the range from 12 to 390 VDC.

The Power stage of the Eagle is fully isolated from other sections of the Eagle, such as the control stage and the heat-sink. This contributes very significantly to the safety and the EMI immunity of the Eagle. In addition it simplifies the requirements of the DC power supply used to power the DC bus of the Eagle and allows also the operation with a non-isolated DC power source.

With the exception of the Eagle XX/400 model, a "smart" control-supply algorithm enables the Eagle to operate with only one power supply with no need for an auxiliary power supply for the logic.

**Note:** All Eagle XX/400 models require a  $24 \pm 20\%$  VDC auxiliary supply voltage. The use of an auxiliary power supply is mandatory for the XX/400 devices.

If backup functionality is required for storing control parameters in case of power-loss, an external  $24 \pm 20\%$  VDC isolated supply should be connected (via the CAN connector on the Eagle) providing maximum flexibility and backup functionality when needed.

## **2.3. Product Features**

### **2.3.1. Current Control**

- Fully digital
- Sinusoidal commutation with vector control or trapezoidal commutation with encoder and/or digital Hall sensors
- 12-bit current loop resolution
- Automatic gain scheduling, to compensate for variations in the DC bus power supply

### **2.3.2. Velocity Control**

- Fully digital
- Programmable PI and FFW (feed forward) control filters
- Sample rate two times current loop sample time
- “On-the-fly” gain scheduling
- Automatic, manual and advanced manual tuning and determination of optimal gain and phase margins

### **2.3.3. Position Control**

- Programmable PIP control filter
- Programmable notch and low-pass filters
- Position follower mode for monitoring the motion of the slave axis relative to a master axis, via an auxiliary encoder input
- Pulse-and-direction inputs
- Sample time: four times that of current loop
- Fast event capturing inputs
- PT and PVT motion modes
- Position-based and time-based ECAM mode that supports a non-linear follower mode, in which the motor tracks the master motion using an ECAM table stored in flash memory
- Dual (position/velocity) loop
- Fast output compare (OC)

### **2.3.4. Communication Options**

Eagle users can use two communication options:

- RS-232 serial communication
- CAN for fast communication in a multi-axis distributed environment

### **2.3.5. Feedback Options**

- Incremental Encoder – up to 20 Mega-Counts (5 Mega-Pulse) per second
- Digital Halls – up to 2 kHz
- Incremental Encoder with Digital Halls for commutation – up to 20 Mega-Counts per second for encoder
- Interpolated Analog (Sine/Cosine) Encoder – up to 250 kHz (analog signal)
  - Internal Interpolation - up to x4096
  - Automatic Correction of amplitude mismatch, phase mismatch, signals offset
  - Auxiliary emulated, unbuffered, single-ended, encoder output
- Resolver
  - Programmable 10 to 15 bit resolution
  - Up to 512 revolutions per second (RPS)
  - Auxiliary emulated, unbuffered, single-ended, encoder output
- Tachometer, Potentiometer
- Absolute Encoder
  - Heidenhain 2.1
  - Stegmann
  - Panasonic
- Elmo drives provide supply voltage for all the feedback options

### **2.3.6. Fault Protection**

The Eagle includes built-in protection against possible fault conditions, including:

- Software error handling
- Status reporting for a large number of possible fault conditions
- Protection against conditions such as excessive temperature, undervoltage/overvoltage, loss of commutation signal, short circuits between the motor power outputs and between each output and power input/return
- Recovery from loss of commutation signals and from communication errors

## 2.4. System Architecture

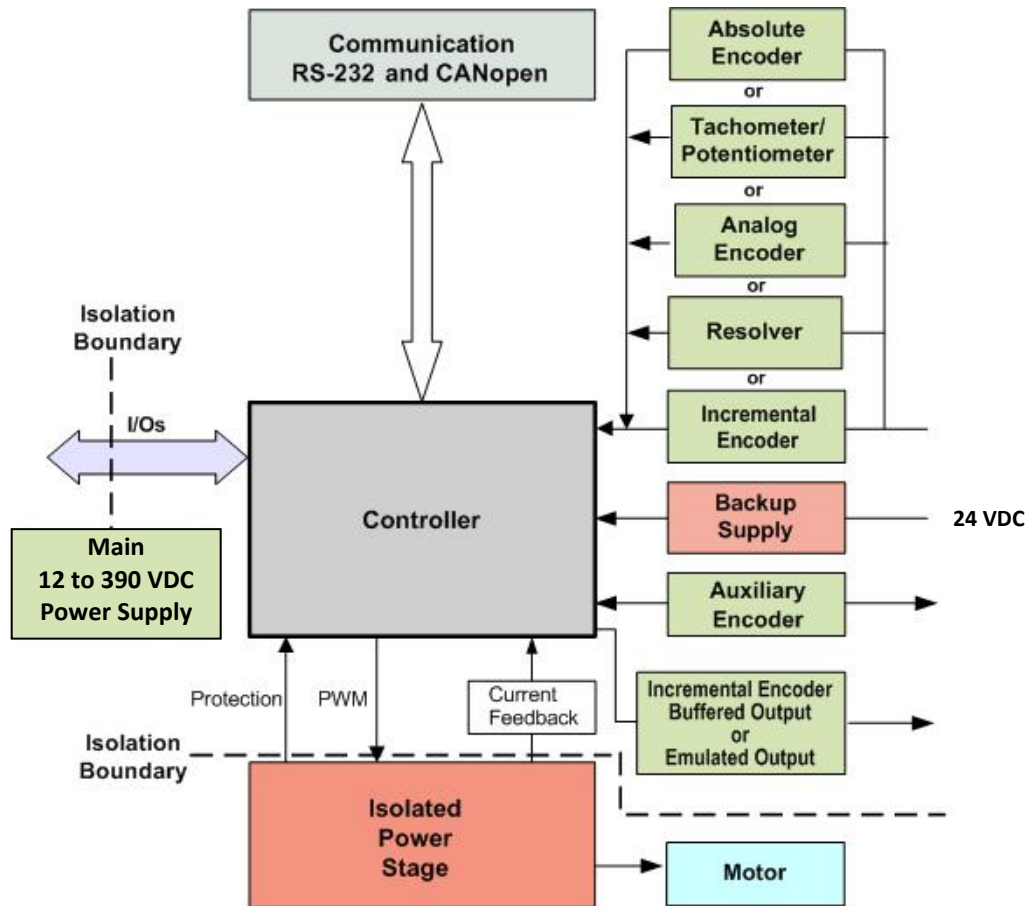


Figure 1: Eagle System Block Diagram


## 2.5. How to Use this Guide

In order to install and operate your Elmo Eagle servo drives, you will use this manual in conjunction with a set of Elmo documentation. Installation is your first step; after carefully reading the safety instructions in the first chapter, the following chapters provide you with installation instructions as follows:

- [Chapter 3, Installation](#), provides step-by-step instructions for unpacking, mounting, connecting and powering up the Eagle.
- [Chapter 4, Technical Specifications](#), lists all the drive ratings and specifications.

Upon completing the instructions in this guide, your Eagle servo drives should be successfully mounted and installed. From this stage, you need to consult higher-level Elmo documentation in order to set up and fine-tune the system for optimal operation. The following figure describes the accompanying documentation that you will require.



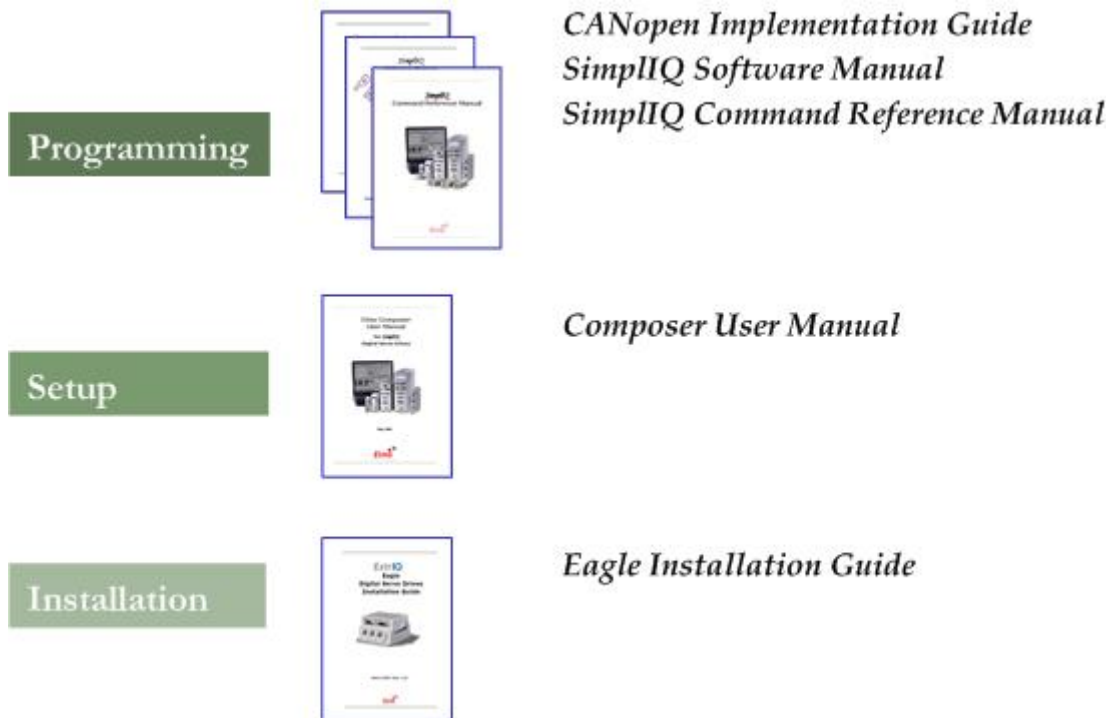

**Figure 2: Elmo Digital Servo Drive Documentation Hierarchy**

As depicted in the previous figure, this installation guide is an integral part of the Eagle documentation set, comprising:

- The *Composer Software Manual*, which includes explanations of all the software tools that are part of Elmo’s Composer software environment.
- The *SimplIQ Command Reference Manual*, which describes, in detail, each software command used to manipulate the Eagle motion controller.
- The *SimplIQ Software Manual*, which describes the comprehensive software used with the Eagle.

## Chapter 3: Installation

The Eagle must be installed in a suitable environment and properly connected to its voltage supplies and the motor.

### 3.1. Before You Begin


#### 3.1.1. Site Requirements






You can guarantee the safe operation of the Eagle by ensuring that it is installed in an appropriate environment.

Feature	Value
Ambient operating temperature	-40 °C to +70 °C (-40 °F to 160 °F)
Maximum operating altitude	12,000 m (39370 feet)
Maximum non-condensing humidity	95%
Operating area atmosphere	No flammable gases or vapors permitted in area

#### 3.1.2. Hardware Requirements

The components that you will need to install your Eagle are:

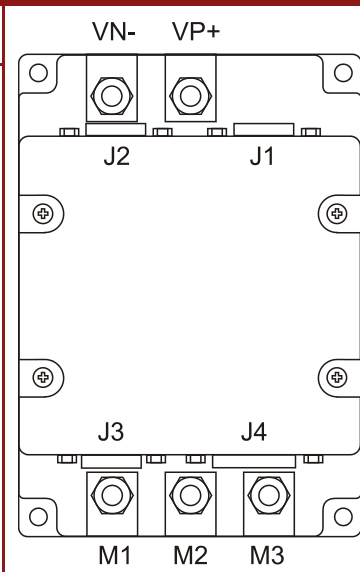Component	Connector	Described in Section	Diagram
Main Power Cable	VP+ VN-	3.4.2.2	 <p style="text-align: right;">EAG0004B</p>
Motor Cable	M1 M2 M3	3.4.2.1	

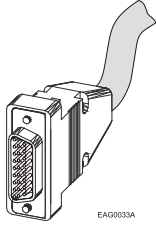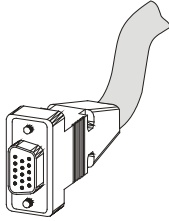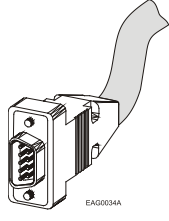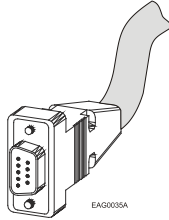Component	Connector	Described in Section	Diagram
Main and Auxiliary Feedbacks Cable	<b>Feedback A and Feedback B</b>	3.4.4	 <p>EAG0033A</p>
Digital I/O and Analog Input Cable (if needed)	<b>GENERAL I/O J1</b>	3.4.7.1	
RS232 Communication Cable	<b>RS232</b>	3.4.8.1	 <p>EAG0034A</p>
CAN Communication cable(s) (if needed)	<b>CAN (in), CAN (out) and Backup Option</b>	3.4.8.2	 <p>EAG0035A</p>
PC for drive setup and tuning			
Motor data sheet or manual			

## 3.2. Unpacking the Drive Components


Before you begin working with the Eagle system, verify that you have all of its components, as follows:

- The Eagle servo drive
- The Composer software and software manual


The Eagle is shipped in a cardboard box with styrofoam protection.

*To unpack the Eagle:*

1. Carefully remove the servo drive from the box and the Styrofoam.
2. Check the drive to ensure that there is no visible damage to the instrument. If any damage has occurred, report it immediately to the carrier that delivered your drive.
3. To ensure that the Eagle you have unpacked is the appropriate type for your requirements, locate the part number sticker on the side of the Eagle. It looks like this:

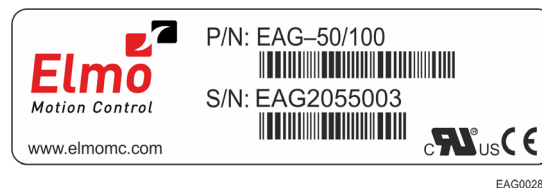

The P/N number at the top gives the type designation as follows:

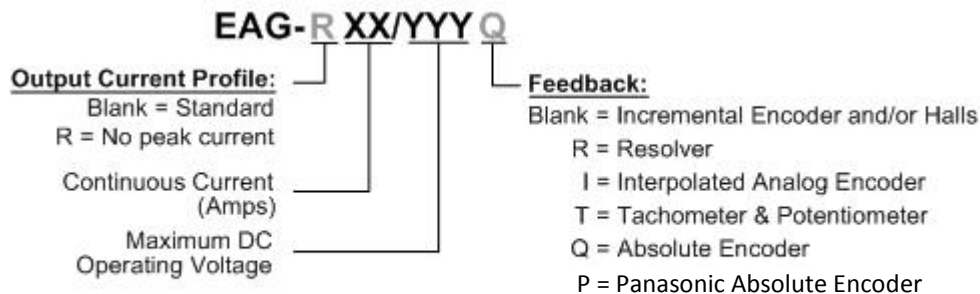


4. Verify that the Eagle type is the one that you ordered, and ensure that the voltage meets your specific requirements.

### 3.3. Mounting the Eagle

The Eagle has been designed for mounting on a flat surface.

M5 round head screws, one through each opening in the heat sink, are used to mount the Eagle (see the diagram below).

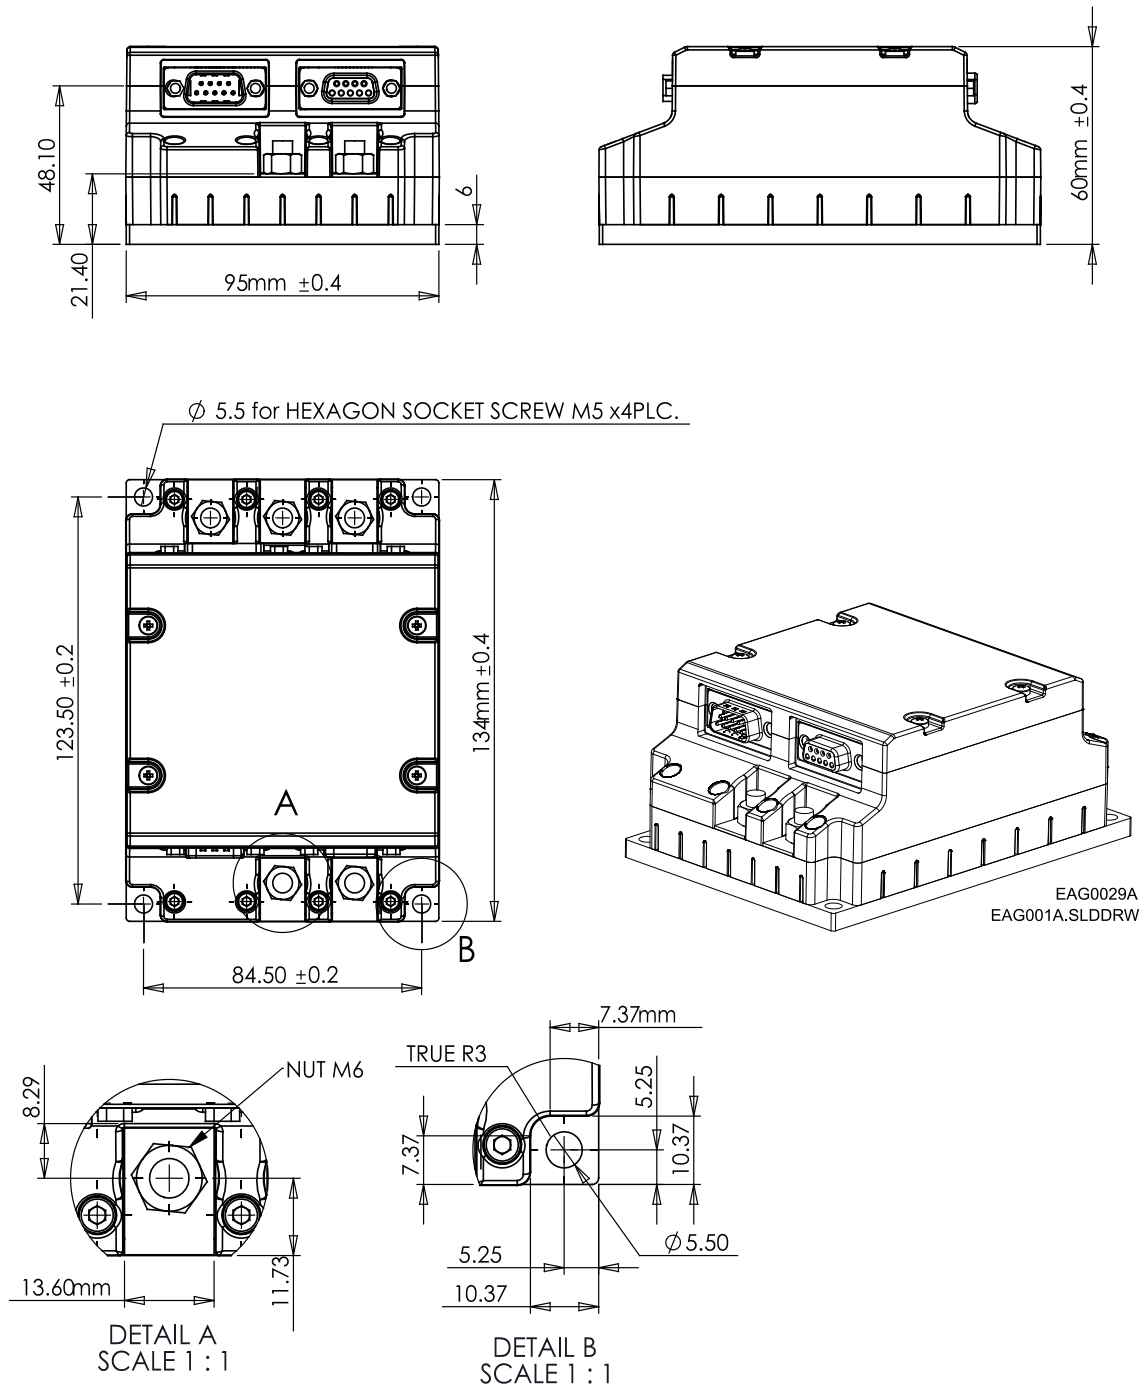

**Figure 3: Mounting the Eagle**

## 3.4. Connecting the Cables

The Eagle has five power screw connectors, four holes for ground connections, and four D-Sub type connectors.

### 3.4.1. Wiring the Eagle

Once the Eagle is mounted, you are ready to wire the device. Proper wiring, grounding and shielding are essential for ensuring safe, immune and optimal servo performance of the Eagle.




**Caution:**


Follow these instructions to ensure safe and proper wiring:

- Use twisted pair shielded cables for control, feedback and communication connections. For best results, the cable should have an aluminum foil shield covered by copper braid, and should contain a drain wire.  
  
The drain wire is a non-insulated wire that is in contact with parts of the cable, usually the shield. It is used to terminate the shield and as a grounding connection.
- The impedance of the wire must be as low as possible. The size of the wire must be thicker than actually required by the carrying current. A 24, 26 or 28 AWG wire for control and feedback cables is satisfactory although 24 AWG is recommended.
- Use shielded wires for motor connections as well. If the wires are long, ensure that the capacitance between the wires is not too high:  $C < 30 \text{ nF}$  is satisfactory for most applications.
- Keep all wires and cables as short as possible.
- Keep the motor wires as far away as possible from the feedback, control and communication cables.
- Ensure that in normal operating conditions, the shielded wires and drain *carry no current*. The only time these conductors carry current is under abnormal conditions, when electrical equipment has become a potential shock or fire hazard while conducting external EMI interferences directly to ground, in order to prevent them from affecting the drive. Failing to meet this requirement can result in drive/controller/host failure.
- After completing the wiring, carefully inspect all wires to ensure tightness, good solder joints and general safety.


The following connectors are used for wiring the Eagle.

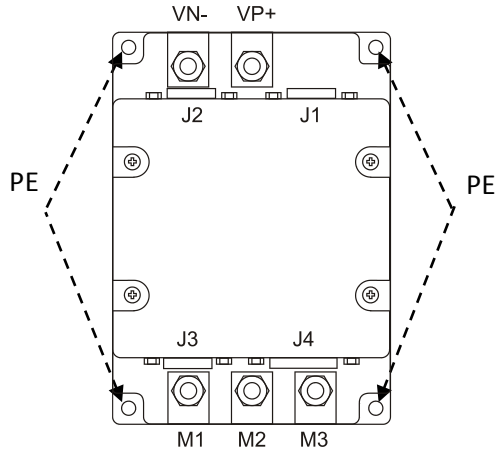Type	Function	Port	Connector Location
Barrel Connector + M6 Spring Washer + M6 Nut	Power	VP+, VN-	 <p style="text-align: right; font-size: small;">EAG0004B</p>
	Motor	M1, M2, M3	
Barrel Connector + M5 Flat Washer + M5 Spring Washer + M5 screw	Ground	PE, PE, PE, PE	


**Table 1: Power Connectors on the Eagle**

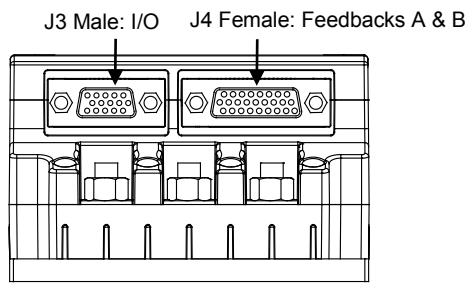Type	Function	Port	Connector Location
26-Pin high density D-Sub female	Feedbacks A & B	J4	 <p style="text-align: right; font-size: small;">EAG0032A</p>
15-Pin high density D-Sub male	Analog Input and General I/O	J3	

**Table 2: Feedback and I/O Connectors on the Eagle**

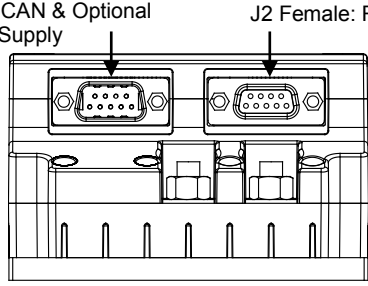Type	Function	Port	Connector Location
9-Pin D-Sub male	CAN & Optional Backup Supply	J1	 <p style="text-align: right; font-size: small;">EAG0031A</p>
9-Pin D-Sub female	RS-232	J2	

**Table 3: Communication and Backup Connectors on the Eagle**

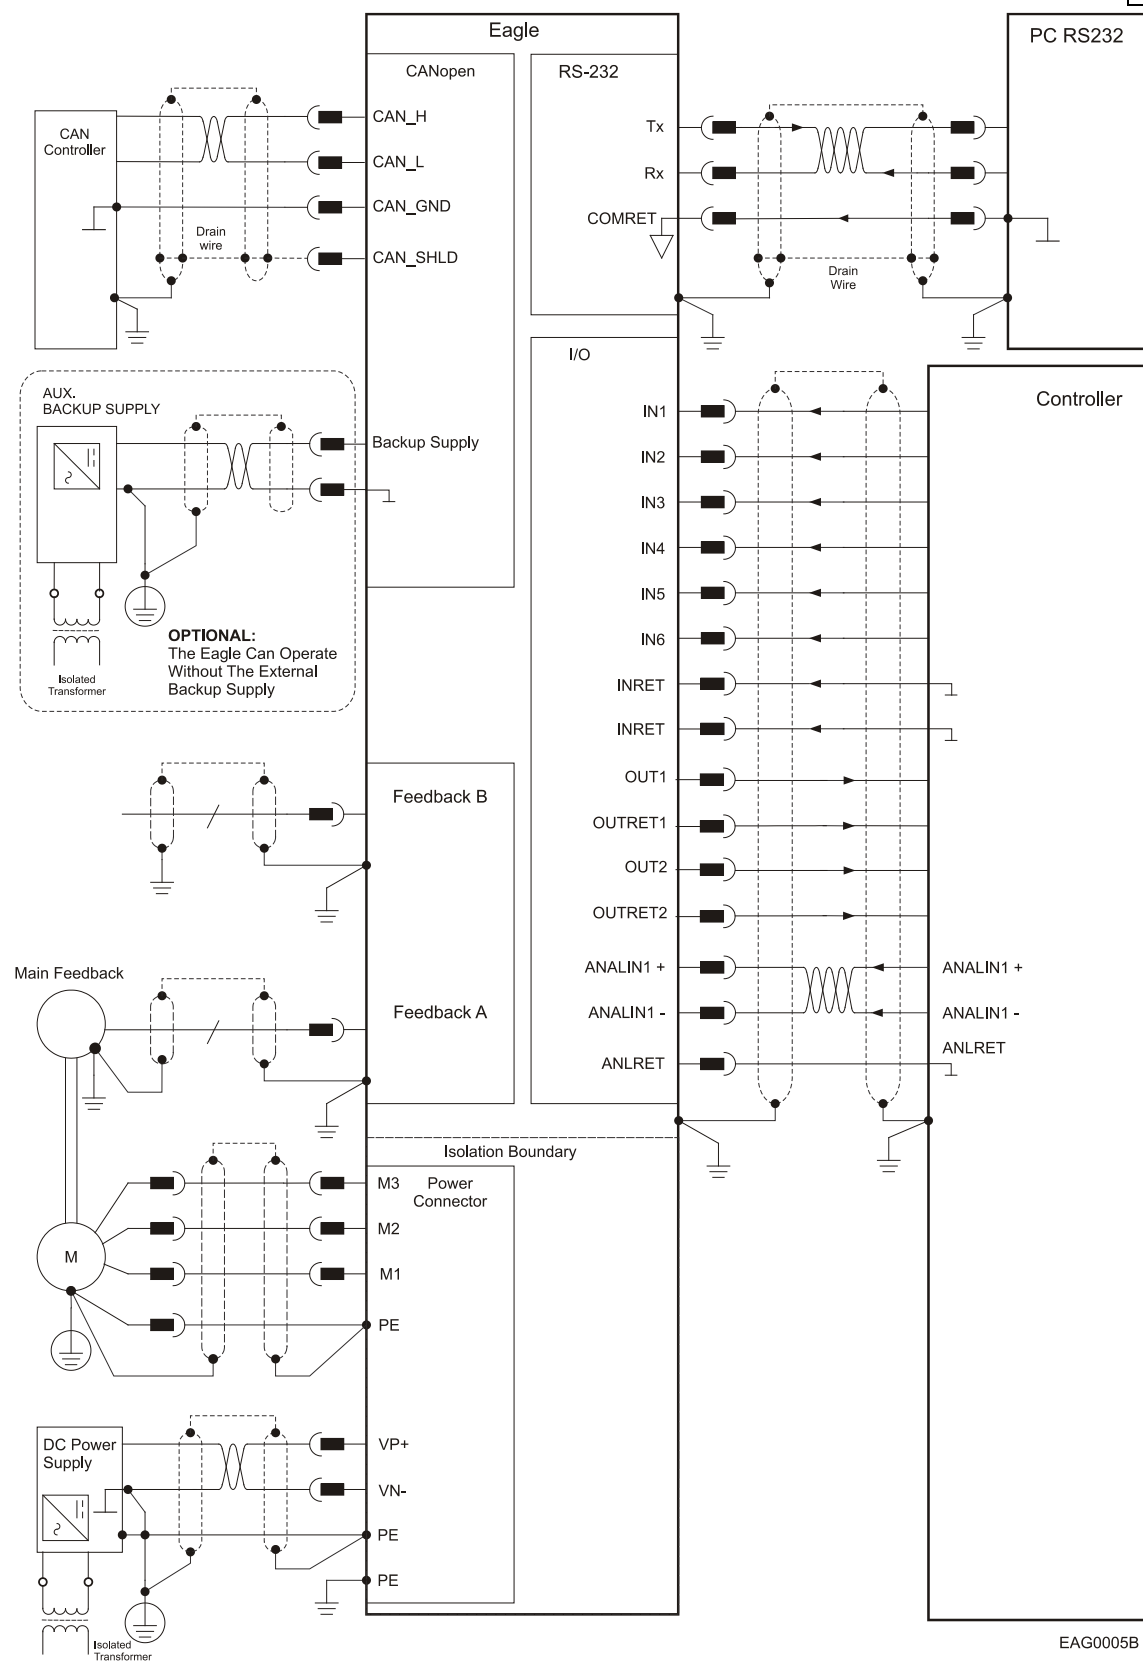



EAG0005B

**Figure 4: Eagle Detailed Connection Diagram**




### 3.4.2. Connecting the Power Cables

The V bus and motor power screws are located in the lower part of the Eagle and include the following:

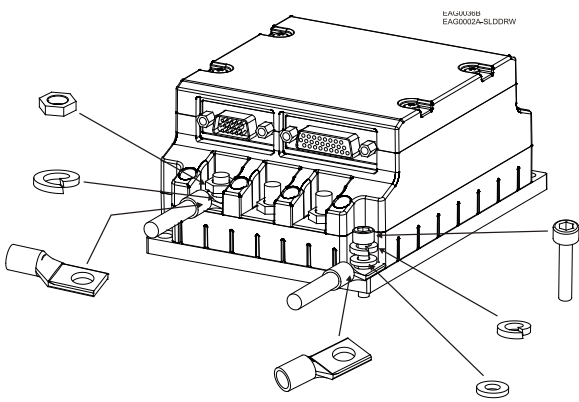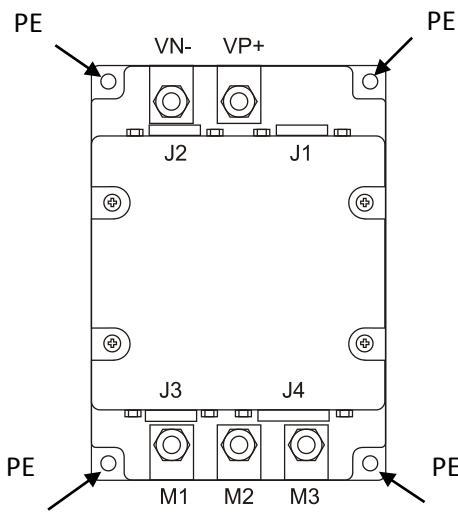
Pin	Function	Cable		Pin Positions
VP+	Pos. Power input	Power		
VN-	Neg. Power input	Power		
PE	Protective earth	Power		
		<b>3-Phase Motor Cable</b>	<b>DC Motor Cable</b>	
PE	Protective earth	Motor	Motor	
M1	Motor phase	Motor	N/C	
M2	Motor phase	Motor	Motor	
M3	Motor phase	Motor	Motor	

**Table 4: Connector for Main Power and Motor Cables**


**Note:** When connecting several motors, all must be wired in an identical manner.

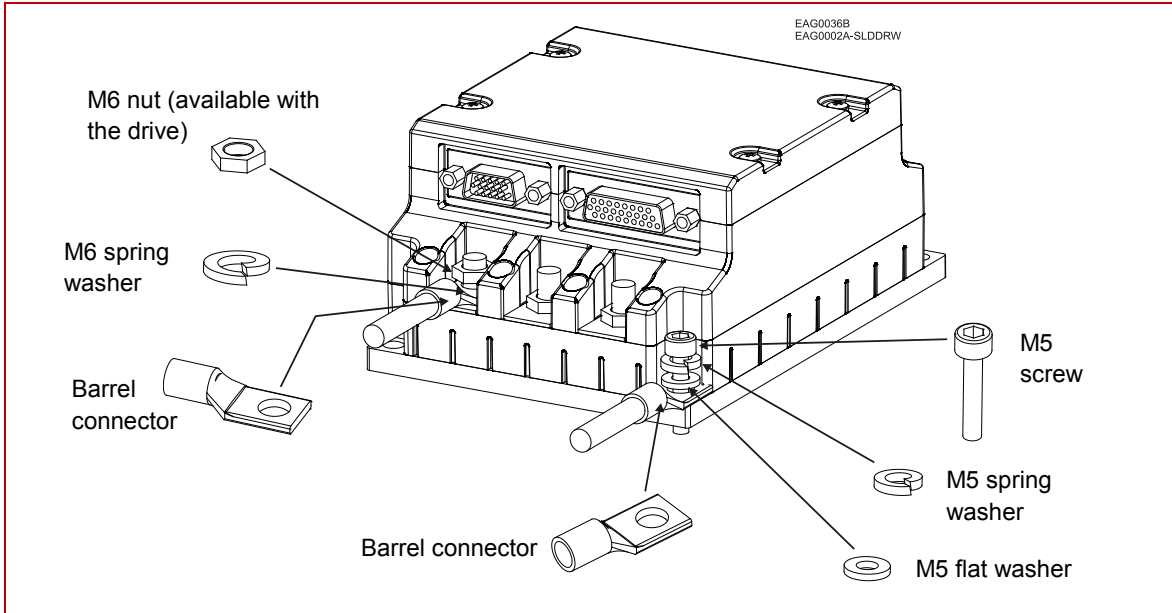

**Step 1: PE Connection**

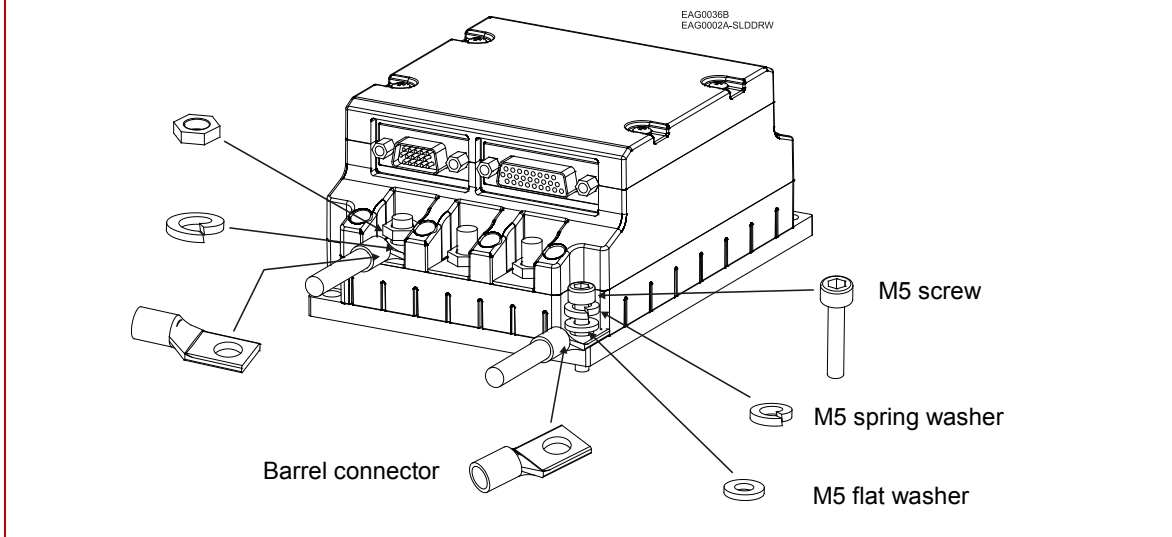

## Step 2: Power and Motor Connection

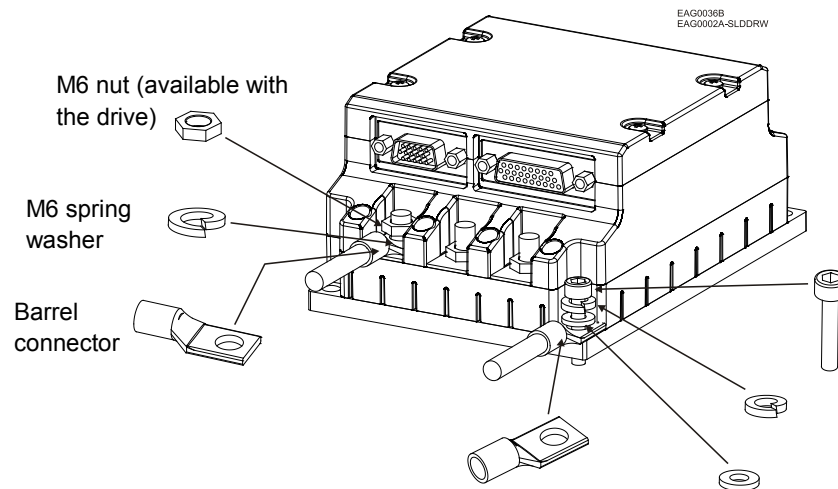


**Table 5: Connecting the Main Power and Motor Cables**

### 3.4.2.1. Connecting the Motor Cable

Connect the motor power cable to the M1, M2, and M3 terminals of the main power connector and the fourth wire to the PE (Protective Earth) on the heat sink (see diagram above). The phase connection order is arbitrary because the Composer will establish the proper commutation automatically during setup.

#### **Notes for connecting the motor cables:**

- For best immunity, it is highly recommended to use a shielded (not twisted) cable for the motor connection. A 4-wire shielded cable should be used. The gauge is determined by the actual current consumption of the motor.
- Connect the shield of the cable to the closest ground connection at the motor end.
- Connect the shield of the cable to the PE terminal on the Eagle.
- Be sure that the motor chassis is properly grounded.
- To close the motor cable into the drive, use the barrel connector, M6 spring washer and M6 nut (in the drive). The required torque is 3 to 4 Nm.
- To close the PE wire into the drive, use the barrel connector, M5 flat washer, M5 spring washer and M5 screw to the heat sink. The required torque is 3 to 4 Nm.

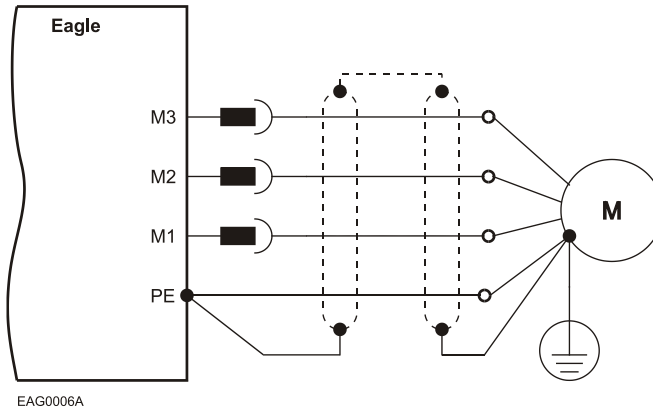


**Figure 5: AC Motor Power Connection Diagram**

### 3.4.2.2. Connecting the DC Power

The Power stage of the Eagle is fully isolated from other sections of the Eagle, such as the control stage and the heat sink. This contributes very significantly to the safety and the EMI immunity of the Eagle. In addition it simplifies the requirements of the DC power supply used to power the DC bus of the Eagle and allows also the operation with a non-isolated DC power source.


#### 3.4.2.2.a Operation with an Isolated DC Power Supply

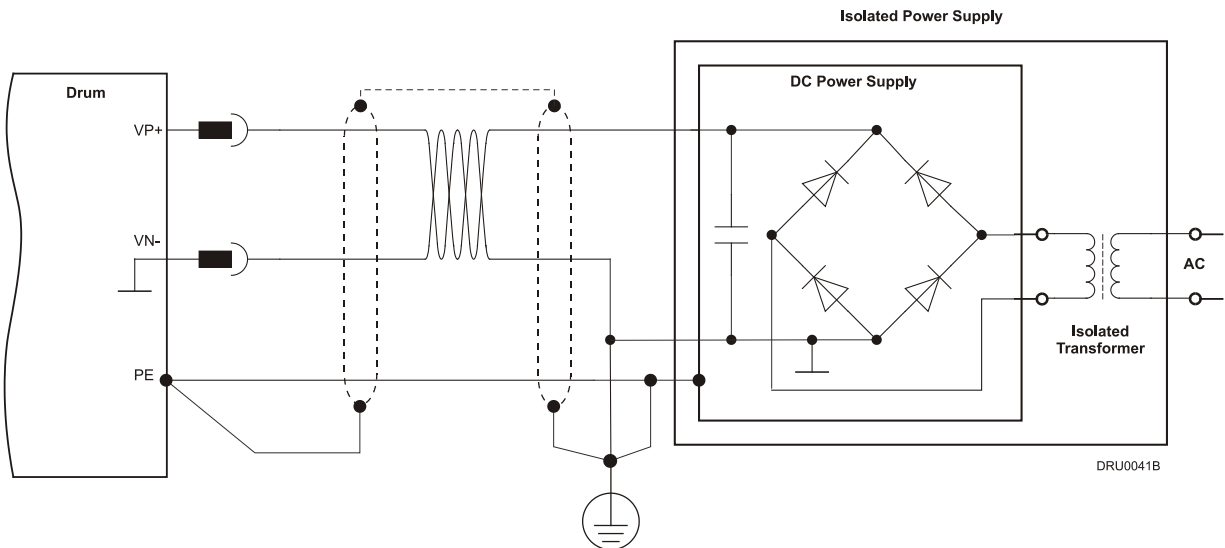

**Figure 6: Isolated DC Power Supply**

In this case, the isolation is achieved by the isolation transformer. It is highly recommended to connect the network PE to the Return (negative terminal) of the Power Supply.

### 3.4.2.2.b Operation with an Isolated Battery Power Supply

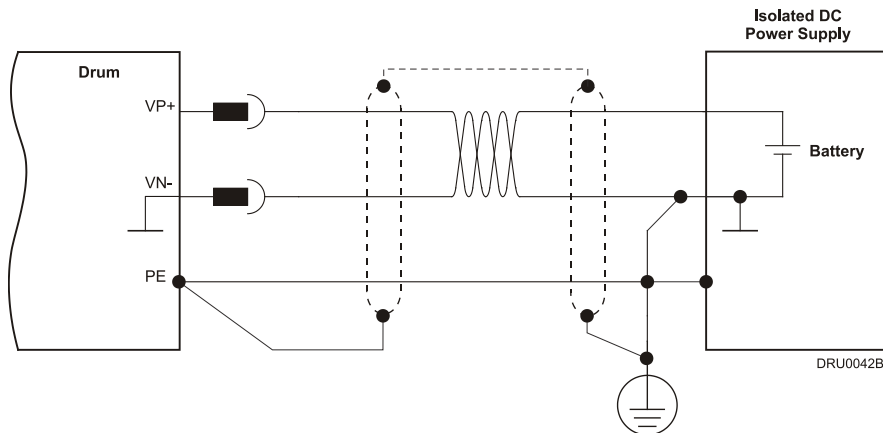

**Figure 7: Isolated Battery Power Supply**




**Caution:** When using batteries, it is recommended to connect the negative pole to the PE.

When doing so, the charger of the battery **must** be isolated from the mains by an isolation transformer.

### 3.4.2.2.c Operation with a Non-Isolated DC Power Supply

The PE (Protective Ground of the AC network) **must not** be connected to the Negative Power Input (the VN- terminal) of the Eagle.

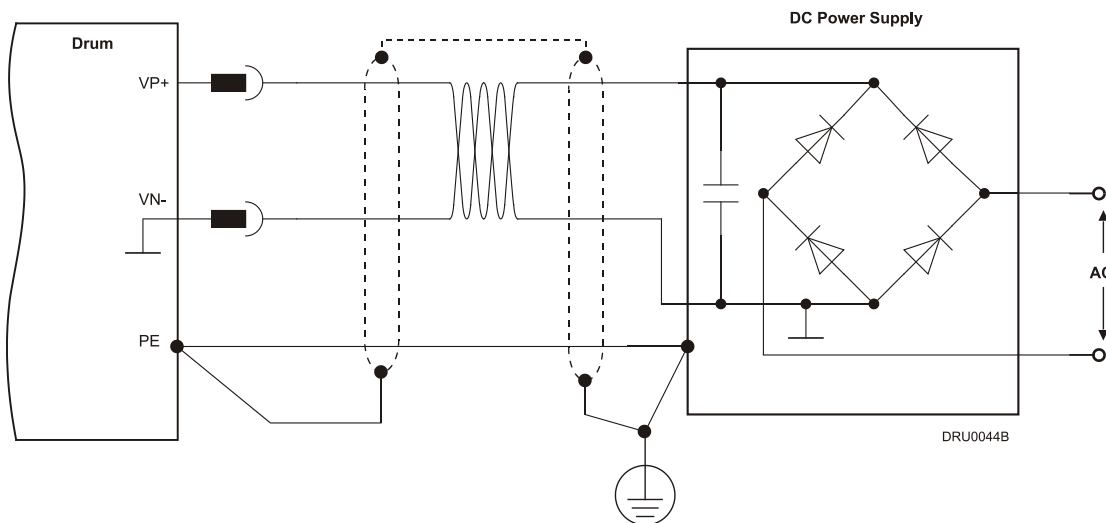


**Figure 8: Non-Isolated DC Power Supply**

The Power Supply is directly connected to the AC line (The AC must be limited to 135 VAC not to exceed the max 190 VDC in case of 200 VDC drive).

The network PE **must not** be connected to the Return of the Power Supply.

### 3.4.2.2.d Operation with a Non-Isolated DC Power Supply by Auto Transformer

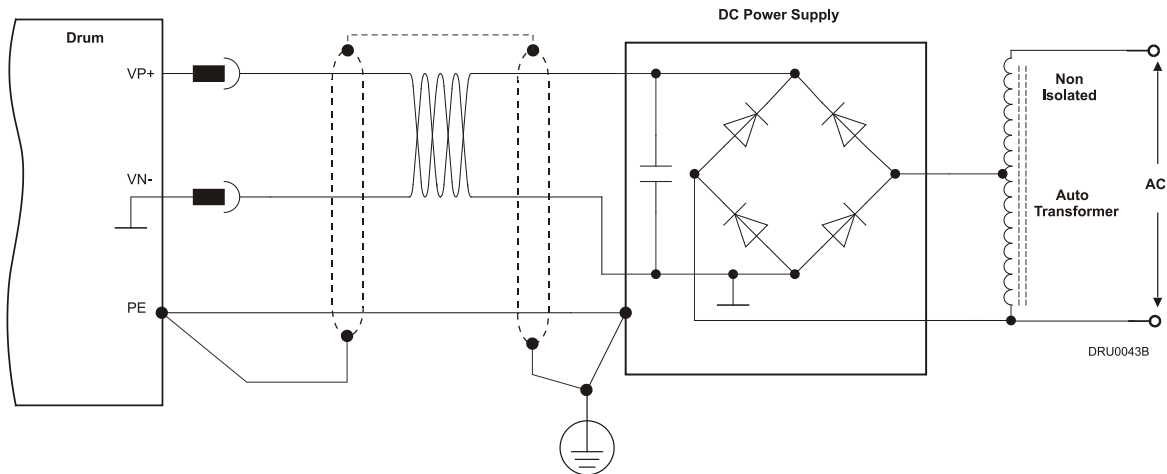

**Figure 9: Non-Isolated DC Power Supply by Auto Transformer**

The Power Supply is directly connected to the AC line through an Autotransformer.

The network PE **must not** be connected to the Return of the Power Supply.



**Warning:**

Connecting the PE to the VN- with a non- isolated power supply will cause damage to the system (any component that is connected to the system might be damaged).

**Notes for connecting the DC power supply:**

- Be aware: The Drum can operate from either an:
  - isolated DC power supply
  - or
  - non-isolated DC power supply
- For best immunity, it is highly recommended to use twisted cables for the DC power supply cable. A 3-wire shielded cable should be used. The gauge is determined by the actual current consumption of the motor.
- Connect both ends of the cable shield to the closest ground connection, one end near the power supply and the other end to the PE terminal on the Drum's heat sink.
- To close the power supply cable into the drive, use the barrel connector, M6 spring washer and M6 nut (in the drive). The required torque is 3 to4 Nm.
- To close the PE wire into the drive, use the barrel connector, M5 flat washer, M5 spring washer and M5 screw to the heat sink. The required torque is 3 to 4 Nm.

### 3.4.2.3. Connecting the Optional Backup Supply Cable

Power to the Eagle is provided by a 12 to 195 VDC source (depending on the model type).

With the exception of the Eagle XX/400 model, a “smart” control-supply algorithm enables the Eagle to operate with only one power supply *with no need for an auxiliary supply voltage*.

**Note:** In the 400 V product line (EAG XX/400), there is no internal connection to enable the main input to power the internal SMPS for low logic voltages. Therefore, **a 24 VDC auxiliary power supply must be connected** in order to activate the 400 V drive’s internal SMPS.

If backup functionality is required for storing control parameters in case of power-outs, an external 12 to 195 VDC power supply can be connected, providing maximum flexibility and optional backup functionality when needed. For the XX/400 model, the 24 VDC auxiliary power supply (see the note above) can carry out this function.

To connect the backup supply to the Auxiliary port, use the Eagle's J1 connector (CAN communication connector). *Remember, you are working with DC power so be sure to exercise caution.*

#### Notes for backup supply connections:

- Use a 24 AWG twisted pair shielded cable. The shield should have copper braid.
- The source of the backup supply must be isolated.
- For safety reasons, connect the return of the backup supply source to the closest ground.
- Connect the cable shield to the closest ground near the power source.
- Before applying power, first verify the polarity of the connection.


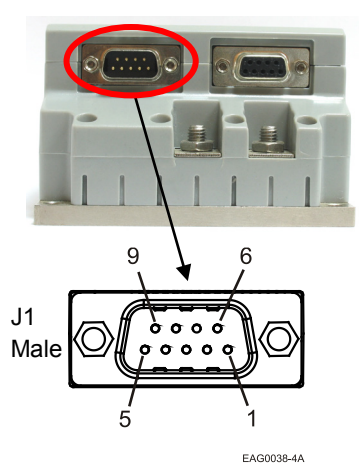
Pin	Signal	Function	Pin Position
J1-9	+VDC Backup Supply	+VDC backup supply	
J1-8	RET Backup Supply	Return (common) of the backup supply	

Table 6: Backup Cable Plug

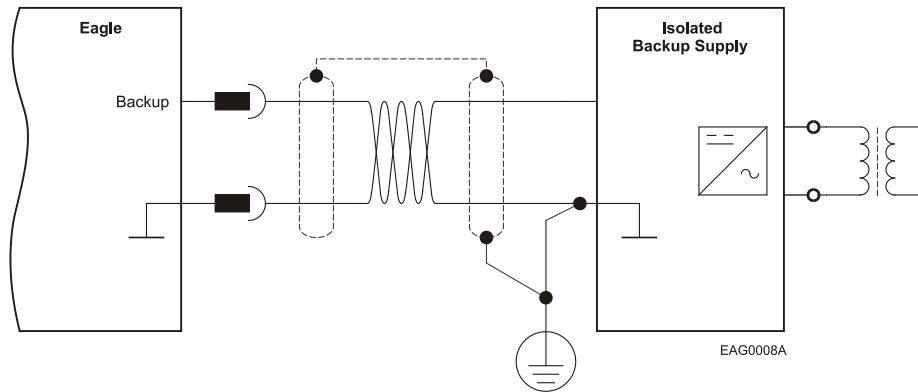

**Figure 10: Backup Supply Connection Diagram**

The Eagle provides the following smart control supply options:


- Internal DC-to-DC converter that allows operation from DC power (no need for auxiliary external supply for normal operation)
- 12 to 195 VDC supply for backing up the control parameters if DC power is shut off



### 3.4.3. Feedback Control and Communication Cable Assemblies

The Eagle features easy-to-use D-Sub type connections for all Control and Feedback cables. Instructions and diagrams describing how to assemble those cables are presented below.

1. Use 24, 26 or 28 AWG twisted-pair shielded cables (24 AWG cable is recommended). For best results, the shield should have aluminum foil covered by copper braid.
2. Use only a D-Sub connector with a **metal housing**.
3. Ideally, solder the drain wire to the connector body as shown in Figure 11. However, the shield may also be attached without soldering, as long as the braid shield is in tight contact with the metal housing of the D-type connector.
4. On the motor side connections, ground the shield to the motor chassis.
5. On controller side connections, follow the controller manufacturer's recommendations concerning the shield.

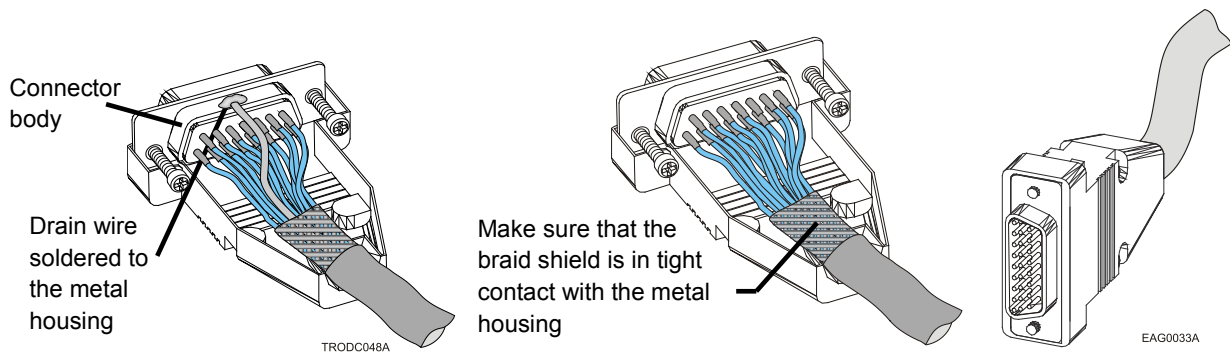

**Figure 11: Feedback and Control Cable Assemblies**

**Note:** All D-Sub type connectors, used with the Eagle, should be assembled in this way.

### 3.4.4. Main Feedback Cable (Feedback A)


The main feedback cable is used to transfer feedback data from the motor to the drive.

The Eagle accepts the following as a main feedback mechanism:

- Incremental encoder only
- Incremental encoder with digital Hall sensors
- Digital Hall sensors only
- Interpolated Analog (Sine/Cosine) encoder (option)
- Resolver (option)
- Tachometer & Potentiometer
- Absolute Encoder

Feedback A on the “front” of the Eagle has a 26-pin high density D-Sub socket. Connect the Main Feedback cable from the motor to Feedback A using a 26-pin, high density D-Sub plug with a metal housing. When assembling the Main Feedback cable, follow the instructions in Section 3.4.3 (*Feedback Control and Communication Cable Assemblies*).

**Note:** The Feedback connector also supports Feedbacks A and B.

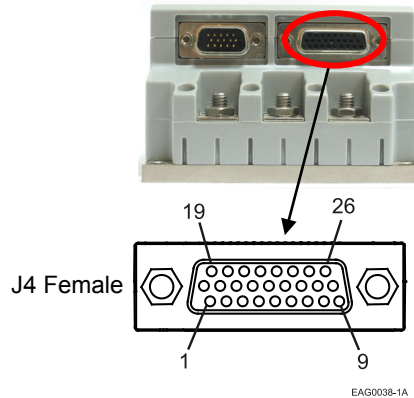

		Incremental Encoder		Interpolated Analog Encoder		Resolver		Tachometer and Potentiometer	
		EAG-XX/YYY_		EAG-XX/YYYYI		EAG-XX/YYYYR		EAG-XX/YYYYT	
Pin	Port	Signal	Function	Signal	Function	Signal	Function	Signal	Function
1	A- Main Input	CHA	Channel A	A+	Sine A	S1	Sine A	Tac1+	Tacho Input 1 Pos. (20 V max)
2	A- Main Input	CHA-	Channel A Complement	A-	Sine A Complement	S3	Sine A Complement	Tac1-	Tacho Input 1 Neg. (20 V max)
3	A- Main Input	CHB	Channel B	B+	Cosine B	S2	Cosine B	Tac2+	Tacho Input 2 Pos. (50 V max)
4	A- Main Input	CHB-	Channel B Complement	B-	Cosine B Complement	S4	Cosine B Complement	Tac2-	Tacho Input 2 Neg. (50 V max)
5	A- Main Input	INDEX	Index	R+	Reference	R1	Vref f=1/TS, 50 mA Max.	POT	Potentiometer Input
6	A- Main Input	INDEX-	Index Complement	R-	Reference Complement	R2	Vref complement f = 1/TS, 50 mA Max.	NC	-
7	Hall A	HA	Hall sensor A input	HA	Hall sensor A input	HA	Hall sensor A input	HA	Hall sensor A input
8	Hall B	HB	Hall sensor B input	HB	Hall sensor B input	HB	Hall sensor B input	HB	Hall sensor B input
9	Hall C	HC	Hall sensor C input	HC	Hall sensor C input	HC	Hall sensor C input	HC	Hall sensor C input
10	B2 – Aux. Output	CHAO	Aux./Main channel A high output	CHAO	Aux./ Emulated channel A high output	CHAO	Aux./ Emulated channel A high	CHAO	Aux./ Emulated channel A high output

Incremental Encoder				Interpolated Analog Encoder		Resolver		Tachometer and Potentiometer	
							output		
11	B2 – Aux. Output	CHAO-	Aux./Main channel A low output	CHAO-	Aux./ Emulated channel A low output	CHAO-	Aux./ Emulated channel A low output	CHAO-	Aux./ Emulated channel A low output
12	B2 – Aux. Output	CHBO	Aux./Main channel B high output	CHBO	Aux./ Emulated channel B high output	CHBO	Aux./ Emulated channel B high output	CHBO	Aux./ Emulated channel B high output

Incremental Encoder				Interpolated Analog Encoder		Resolver		Tachometer and Potentiometer	
		EAG-XX/YYY_		EAG-XX/YYYYI		EAG-XX/YYYYR		EAG-XX/YYYYT	
Pin	Port	Signal	Function	Signal	Function	Signal	Function	Signal	Function
13	B2 – Aux. Output	CHBO-	Aux./Main channel B low output	CHBO-	Aux./Emulated channel B low output	CHBO-	Aux./ Emulated channel B low output	CHBO-	Aux./ Emulated channel B low output
14	B2 – Aux. Output	INDEXO	Aux./Main INDEX high output	INDEXO	Aux. INDEX high output	INDEXO	Aux./ Emulated INDEX high output	INDEXO	Aux. INDEX high output
15	B2 – Aux. Output	INDEXO-	Aux./Main INDEX low output	INDEXO-	Aux. INDEX low output	INDEXO-	Aux./ Emulated INDEX low output	INDEXO-	Aux. INDEX low output
16	PWR	SUPRET	Supply return	SUPRET	Supply return	SUPRET	Supply return	SUPRET	Supply return
17	PWR	SUPRET	Supply return	SUPRET	Supply return	SUPRET	Supply return	SUPRET	Supply return
18	PWR	SUPRET	Supply return	SUPRET	Supply return	SUPRET	Supply return	SUPRET	Supply return
19	B1 – Aux. Input/ Output	CHA	Main channel A high output/ Auxiliary channel A high input	CHA	Emulated channel A high output/ Auxiliary channel A high input	CHA	Emulated channel A high output/ Auxiliary channel A high input	CHA	Emulated channel A high output/ Auxiliary channel A high input
20	B1 – Aux. Input/ Output	CHA-	Main channel A low output/ Auxiliary channel A low input	CHA-	Emulated channel A low output/ Auxiliary channel A low input	CHA-	Emulated channel A low output/ Auxiliary channel A low input	CHA-	Emulated channel A low output/ Auxiliary channel A low input

		Incremental Encoder		Interpolated Analog Encoder		Resolver		Tachometer and Potentiometer	
21	B1 – Aux. Input/ Output	CHB	Main channel B high output/ Auxiliary channel B high input	CHB	Emulated channel B high output/ Auxiliary channel B high input	CHB	Emulated channel B high output/ Auxiliary channel B high input	CHB	Emulated channel B high output/ Auxiliary channel B high input


		Incremental Encoder		Interpolated Analog Encoder		Resolver		Tachometer and Potentiometer	
		EAG-XX/YYY_		EAG-XX/YYYYI		EAG-XX/YYYYR		EAG-XX/YYYYT	
Pin	Port	Signal	Function	Signal	Function	Signal	Function	Signal	Function
22	B1 – Aux. Input/ Output	CHB-	Main channel B low output/ Auxiliary channel B low input	CHB-	Emulated channel B low output/ Auxiliary channel B low input	CHB-	Emulated channel B low output/ Auxiliary channel B low input	CHB-	Emulated channel B low output/ Auxiliary channel B low input
23	B1 – Aux. Input/ Output	INDEX	Main INDEX high output/ Auxiliary INDEX high input	INDEX	Auxiliary INDEX high input	INDEX	Emulated INDEX high output/ Auxiliary INDEX high input	INDEX	Auxiliary INDEX high input
24	B1 – Aux. Input/ Output	INDEX-	Main INDEX low output/ Auxiliary INDEX low input	INDEX-	Auxiliary INDEX low input	INDEX-	Emulated INDEX low output/ Auxiliary INDEX low input	INDEX-	Auxiliary INDEX low input
25	PWR	+5V	Encoder/ Hall +5V supply	+5V	Encoder/Hall +5V supply	+5V	Encoder/ Hall +5V supply	+5V	Encoder/Hall +5V supply
26	PWR	+5V	Encoder/ Hall +5V supply	+5V	Encoder/Hall +5V supply	+5V	Encoder/ Hall +5V supply	+5V	Encoder/Hall +5V supply

**Table 7: Feedback Cable Pin Assignments (Part A)**

Absolute Encoders					
EAG-XX/YYYQ					
Pin	Port	Signal	Heidenhain 2.1	Signal	Stegmann
1	A- Main Input	A+	Sine A	A-	Sine A Complement
2	A- Main Input	A-	Sine A Complement	A+	Sine A
3	A- Main Input	B+	Cosine B	B+	Cosine B
4	A- Main Input	B-	Cosine B Complement	B-	Cosine B Complement
5	A- Main Input	DATA+	Data	DATA+	Data
6	A- Main Input	DATA-	Data Complement	DATA-	Data Complement
7	Hall A	HA	Hall sensor A input	HA	Hall sensor A input
8	Hall B	HB	Hall sensor B input	HB	Hall sensor B input
9	Hall C	HC	Hall sensor C input	HC	Hall sensor C input
10	B2- Aux. Output	CHAO	Aux. / Emulated channel A high output	CHAO	Aux. channel A high output / Emulated channel A low output
11	B2- Aux. Output	CHAO-	Aux. / Emulated channel A low output	CHAO-	Aux. channel A low output / Emulated channel A high output
12	B2- Aux. Output	CHBO	Aux. / Emulated channel B high output	CHBO	Aux. / Emulated channel B high output
13	B2- Aux. Output	CHBO-	Aux. / Emulated channel B low output	CHBO-	Aux. / Emulated channel B low output
14	B2- Aux. Output	INDEXO	Aux. INDEX high output	INDEXO	Aux. INDEX high output
15	B2- Aux. Output	INDEXO-	Aux. INDEX low output	INDEXO-	Aux. INDEX low output
16		CLK+	Clock	N.A	Do not connect
17		CLK-	Clock Complement	N.A	Do not connect
18	PWR	SUPRET	Supply return	SUPRET	Supply return
19	B1- Aux. Input/ Output	CHA	Emulated channel A high output/ Auxiliary channel A high input	CHA	Emulated channel A low output / Auxiliary channel A high input
20	B1- Aux. Input/Output	CHA-	Emulated channel A low output/ Auxiliary channel A low input	CHA-	Emulated channel A high output / Auxiliary channel A low input
21	B1- Aux. Input/Output	CHB	Emulated channel B high output/ Auxiliary channel B high input	CHB	Emulated channel B high output/ Auxiliary channel B high input


Absolute Encoders					
EAG-XX/YYYQ					
Pin	Port	Signal	Heidenhain 2.1	Signal	Stegmann
22	B1- Aux. Input/ Output	CHB-	Emulated channel B low output/ Auxiliary channel B low input	CHB-	Emulated channel B low output/ Auxiliary channel B low input
23	B1- Aux. Input/ Output	INDEX	Auxiliary INDEX high input	INDEX	Auxiliary INDEX high input
24	B1- Aux. Input/ Output	INDEX-	Auxiliary INDEX low input	INDEX-	Auxiliary INDEX low input
25	PWR	+5V	Encoder/Hall +5V supply	+5V	+5V Hall supply
26	PWR	+8V	Do not connect	+8V	+8V Encoder supply

Table 8: Feedback Cable Pin Assignments (Part B)

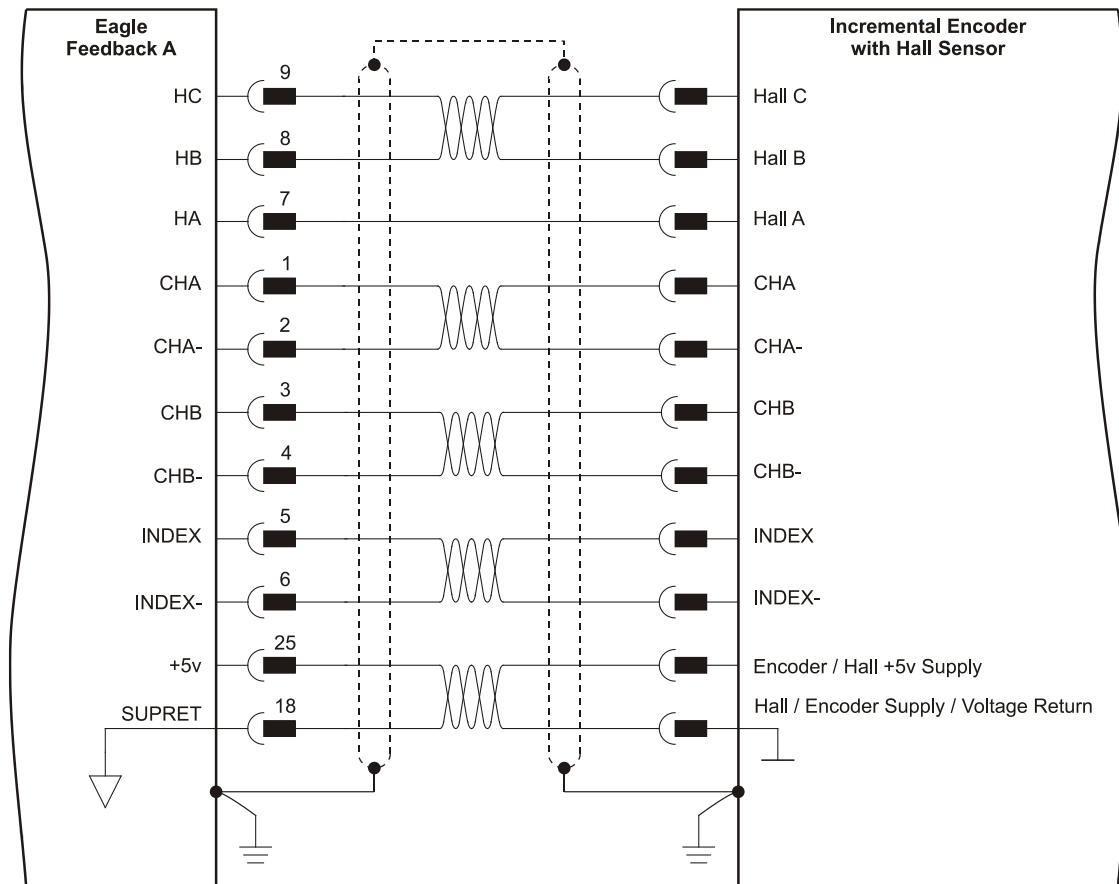


EAG0009A


Figure 12: Main Feedback - Incremental Encoder Connection Diagram

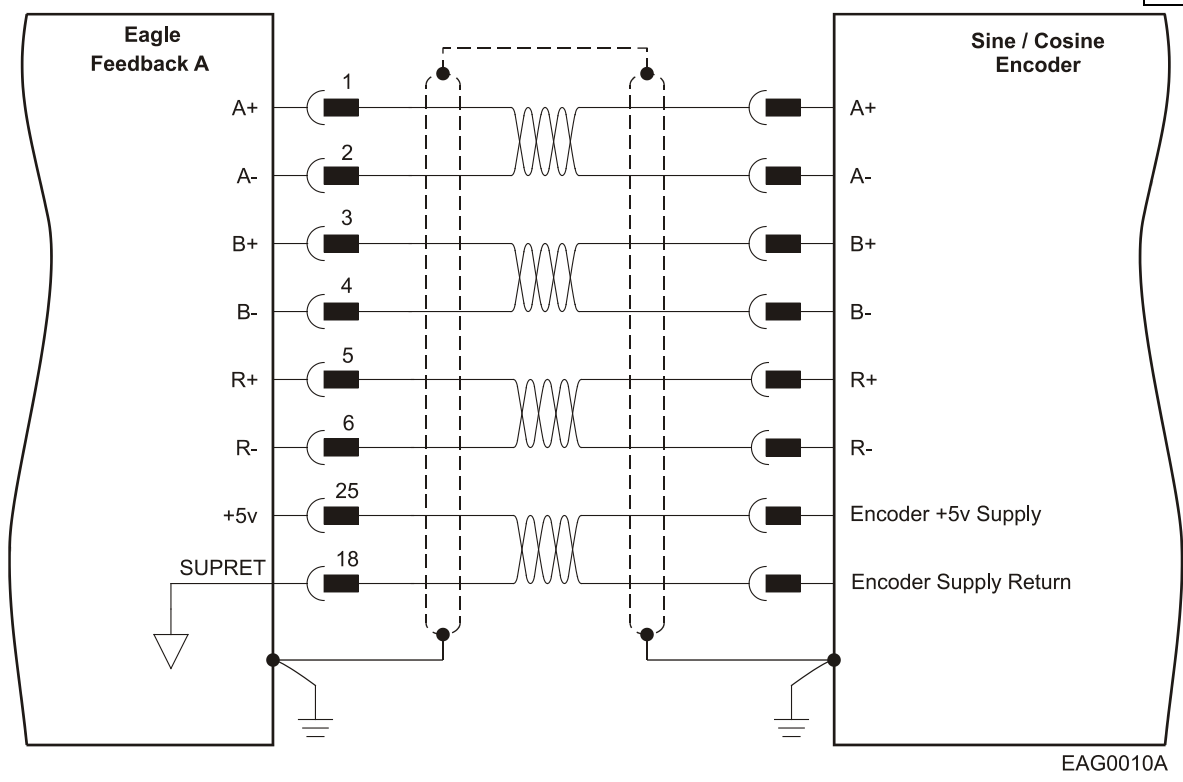

**Figure 13: Main Feedback – Interpolated Analog (Sine/Cosine) Encoder Connection Diagram**

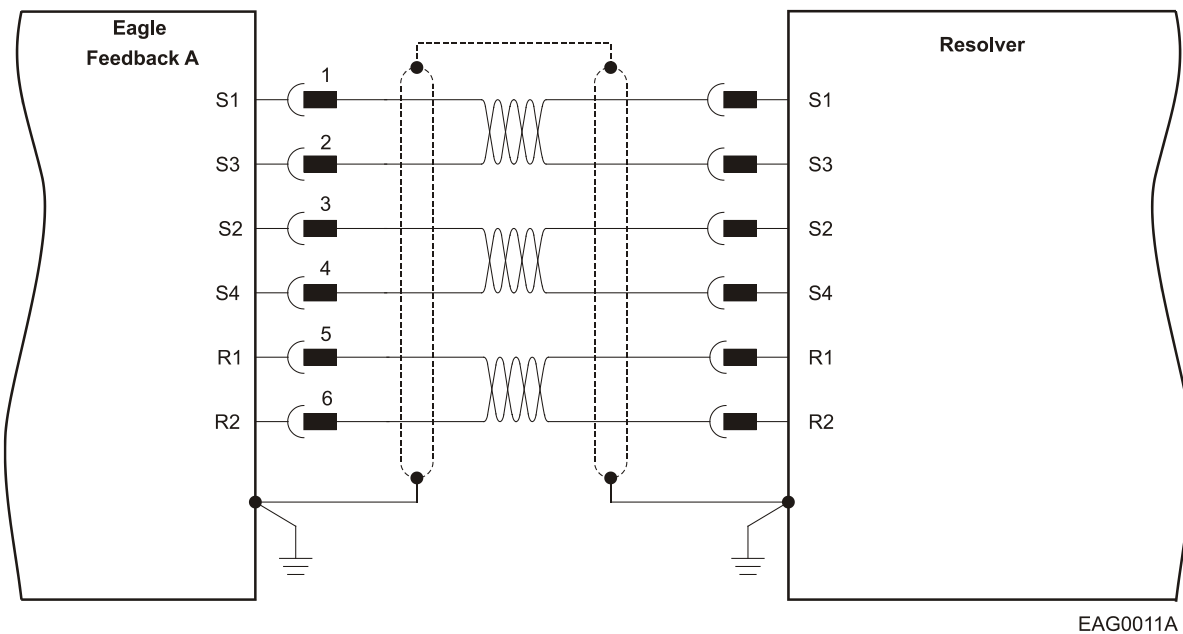


**Figure 14: Main Feedback – Resolver Connection Diagram**

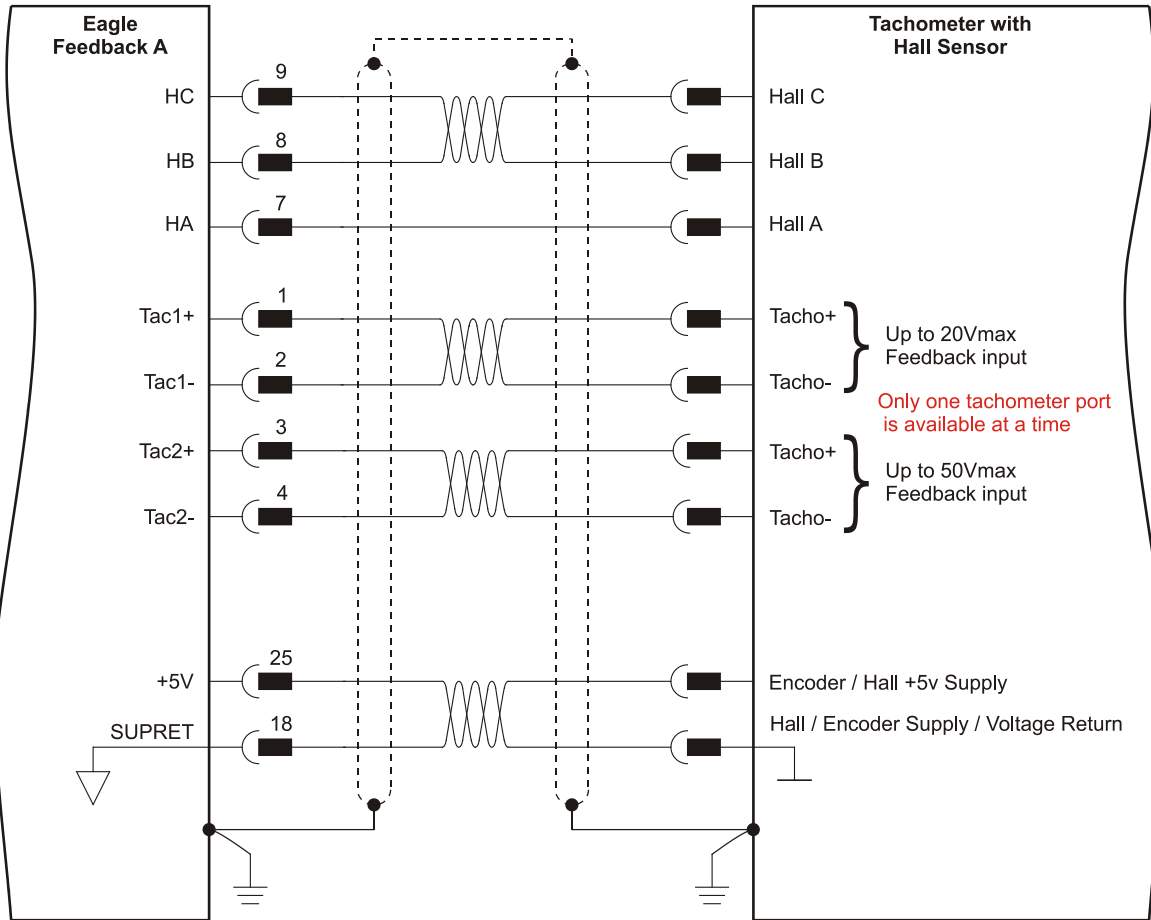

EAG0012A


**Figure 15: Main Feedback – Tachometer Feedback with Digital Hall Sensor  
Connection Diagram for Brushless Motors**

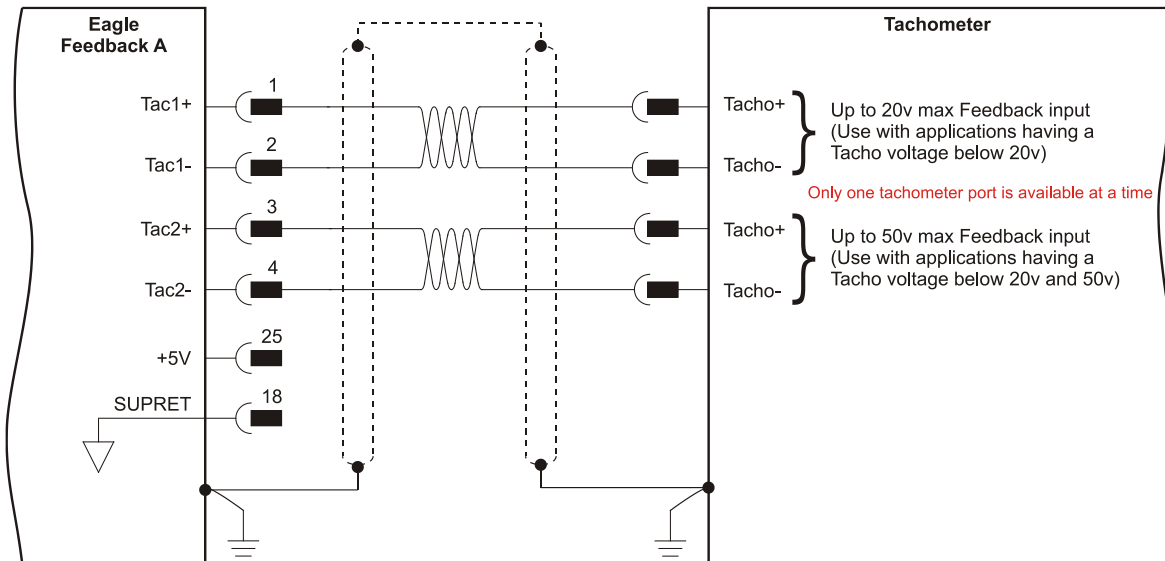


EAG0013A

**Figure 16: Main Feedback – Tachometer Feedback Connection Diagram for Brush Motors**




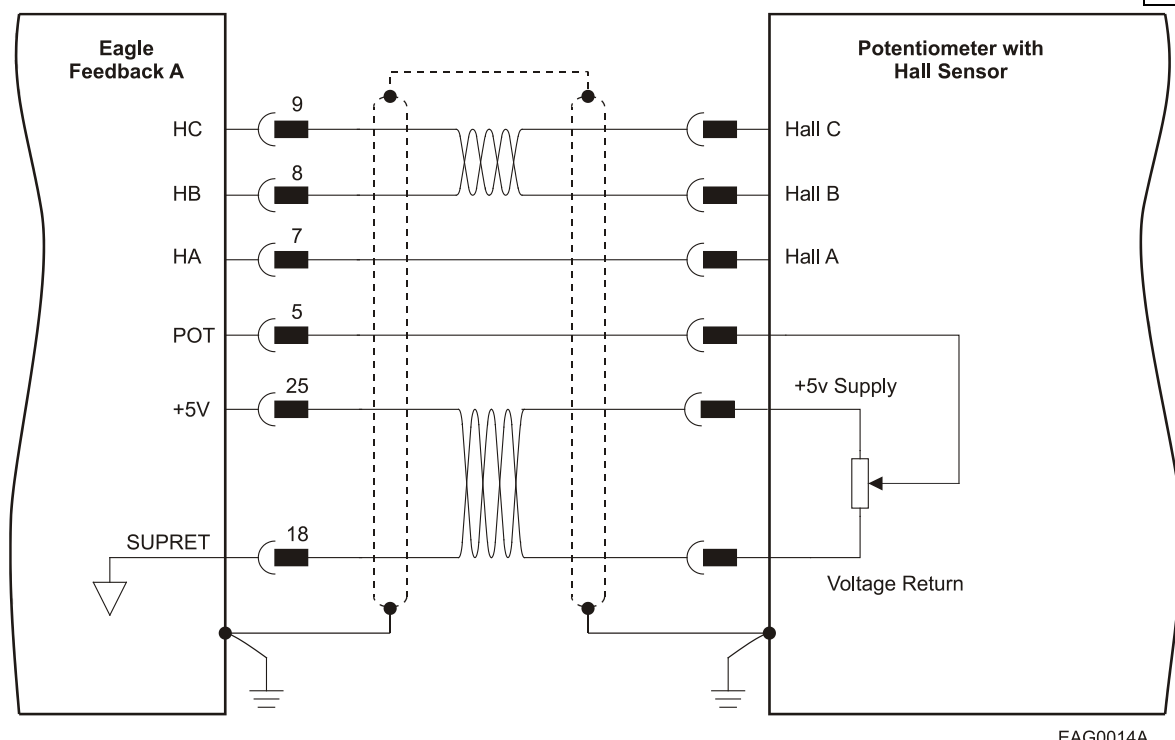

**Figure 17: Main Feedback – Potentiometer Feedback with Digital Hall Sensor**  
**Connection Diagram for Brushless Motors**

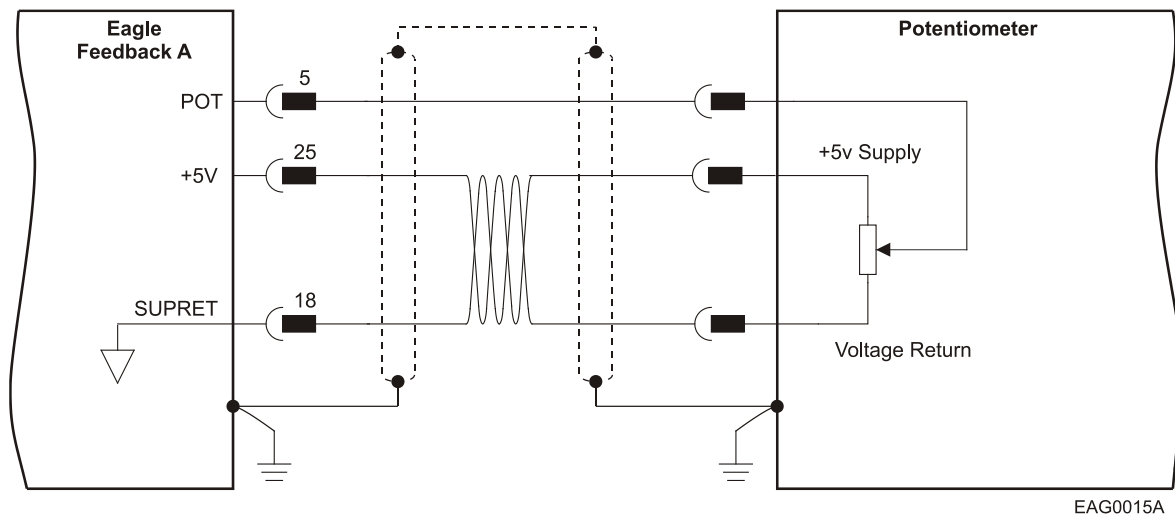


**Figure 18: Main Feedback –**  
**Potentiometer Feedback Connection Diagram for Brush Motors and Voice Coils**

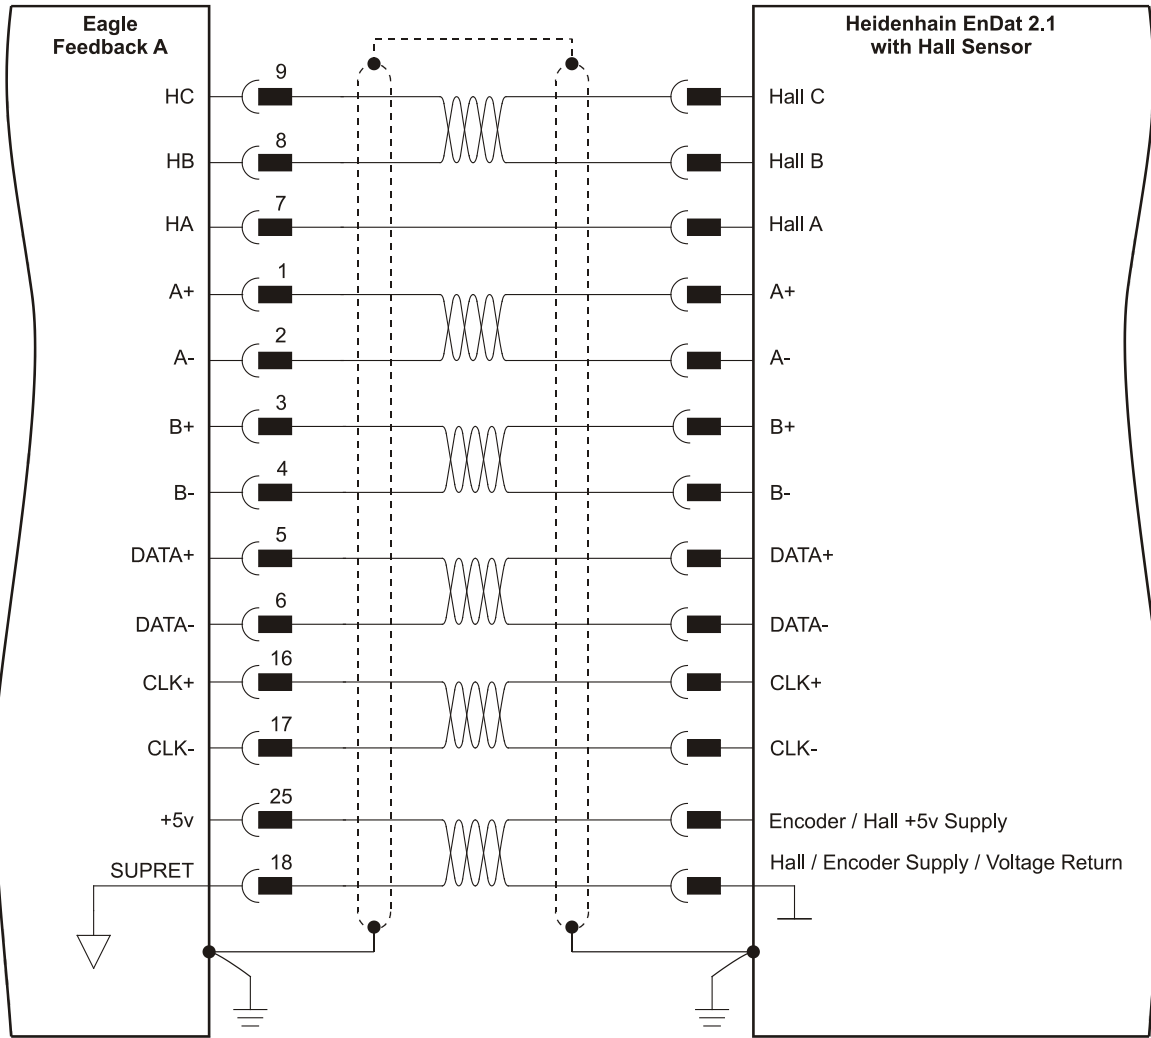


EAG0016A

**Figure 19: Main Feedback – Heidenhain (EnDat 2.1) Feedback with Hall Sensor Connection Diagram**

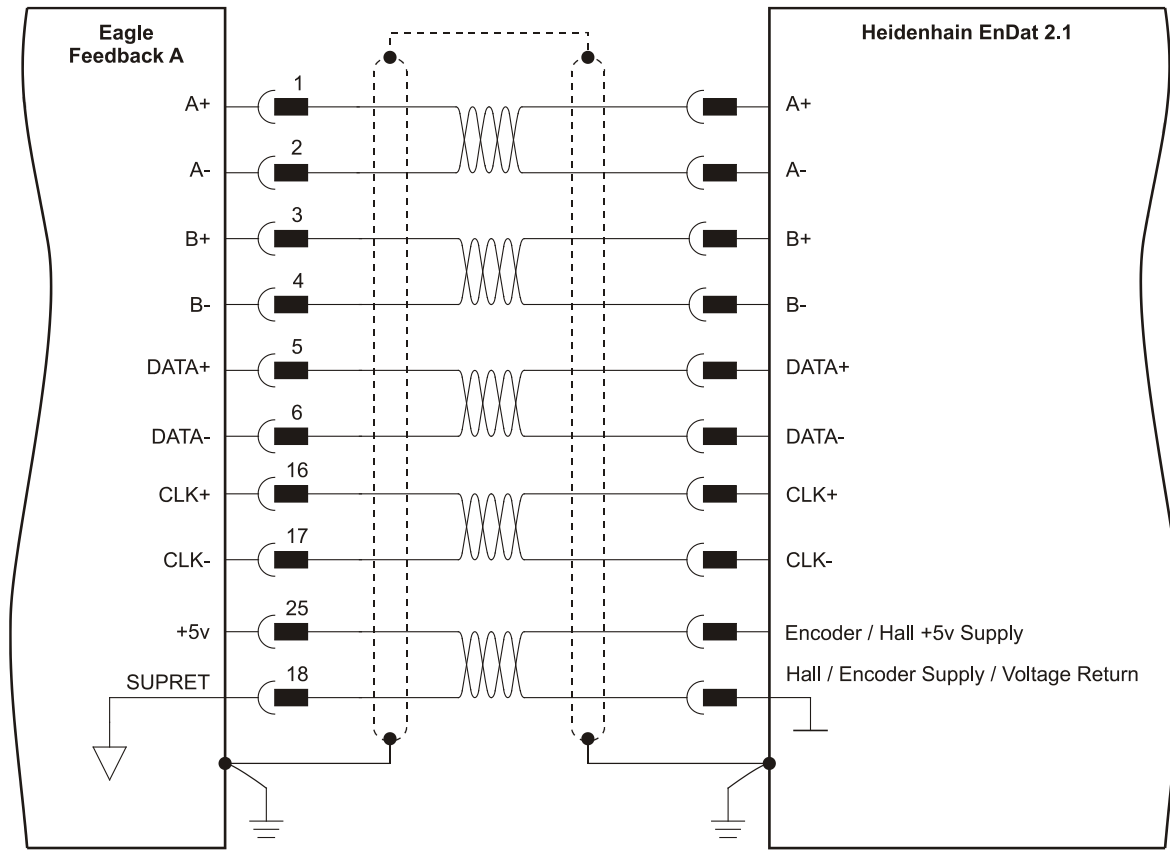


EAG0017A

**Figure 20: Main Feedback –  
 Heidenhain (EnDat 2.1) Feedback Connection Diagram**

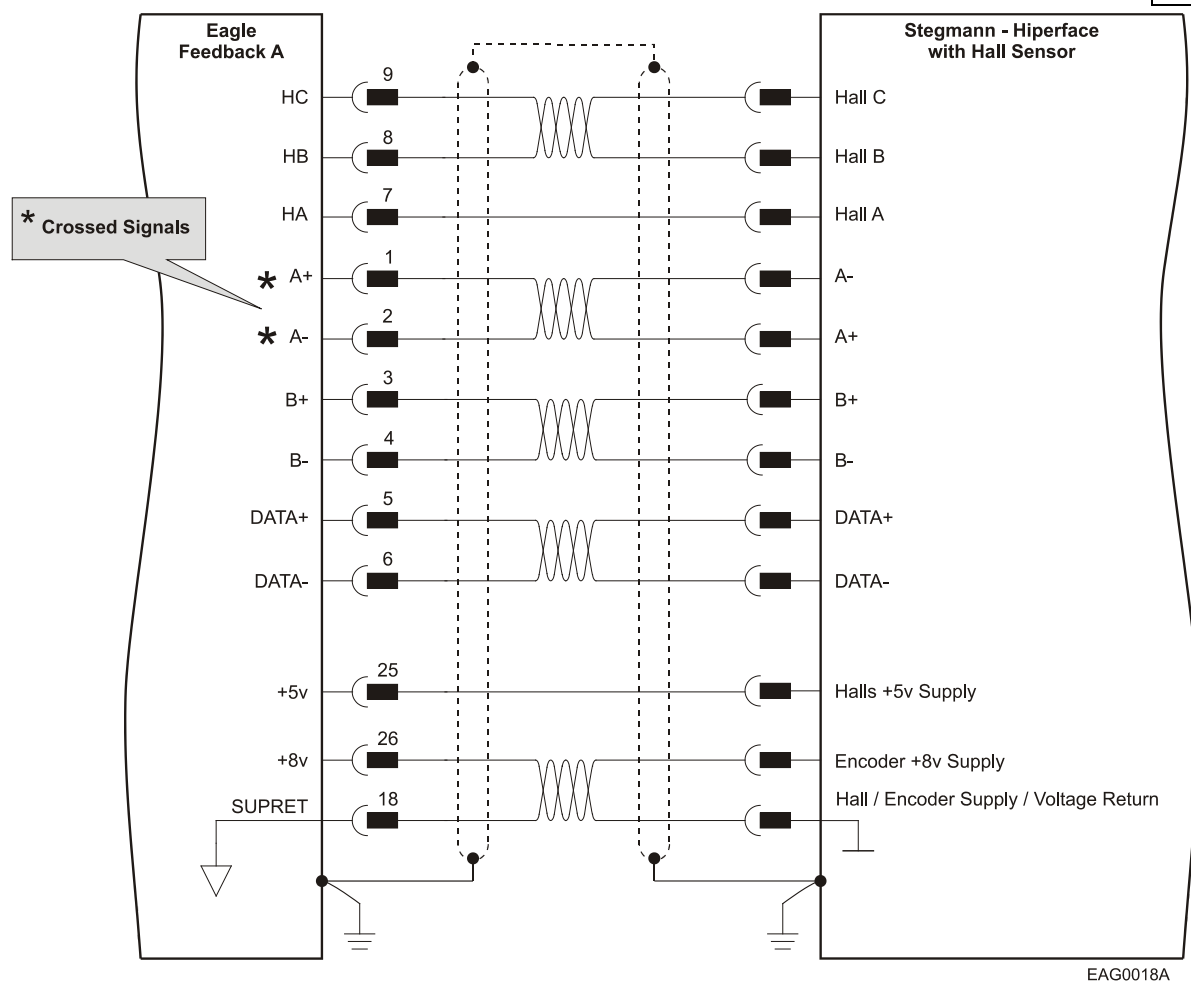







**Figure 21: Main Feedback – Stegmann (Hiperface) Feedback with Hall Sensor Connection Diagram**



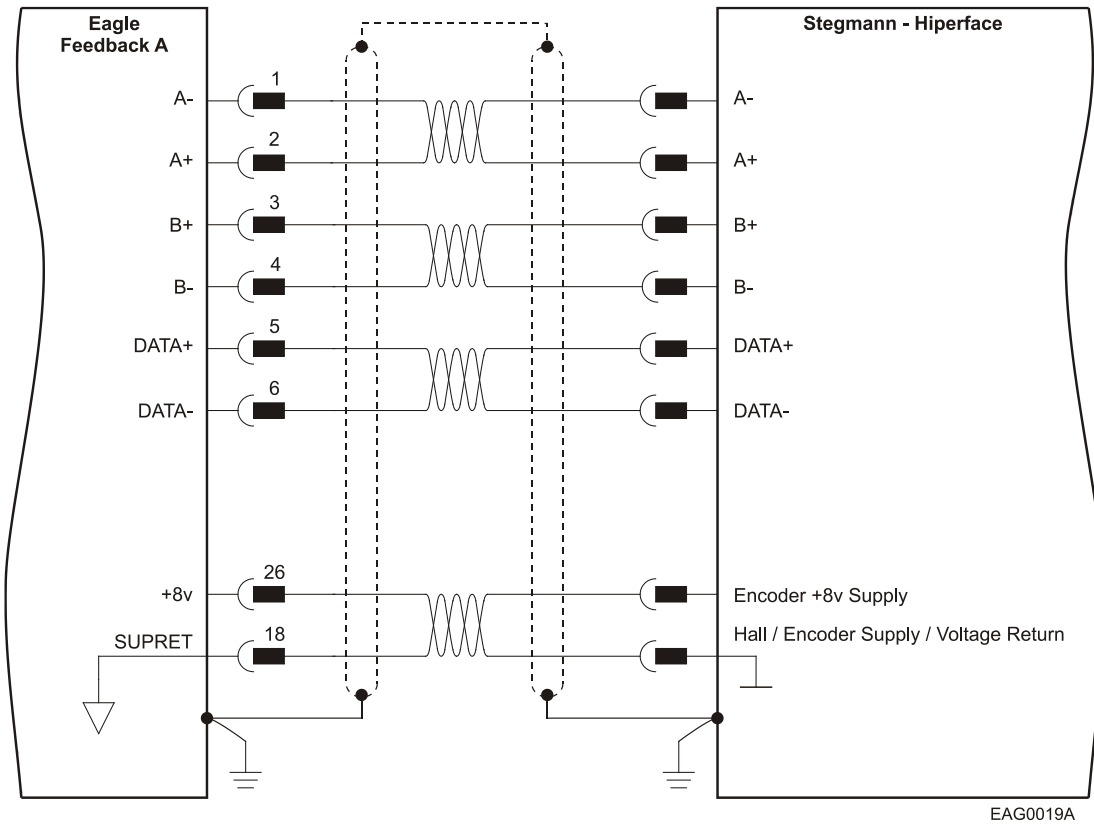


**Figure 22: Main Feedback – Stegmann (Hiperface) Feedback Connection Diagram**

### 3.4.5. Main and Auxiliary Feedback Combinations

The Main Feedback is always used in motion control devices whereas Auxiliary Feedback is often, but not always used. The Auxiliary Feedback connector on the Eagle, "Feedback B" has two ports, Port B1 and Port B2. When used in combination with the Main Feedback port, "Feedback A", the ports can be set, by software, as follows:

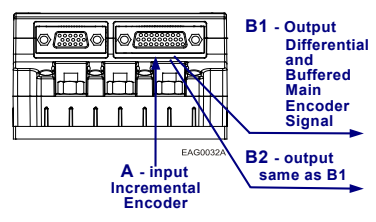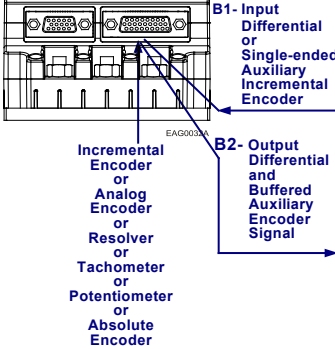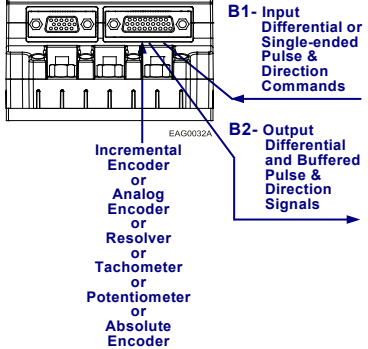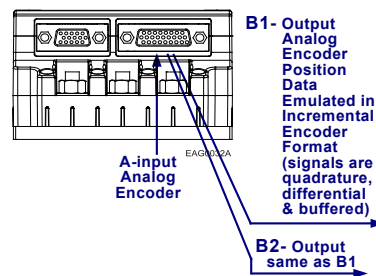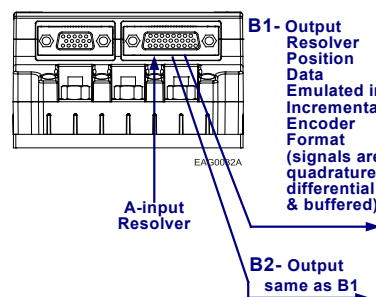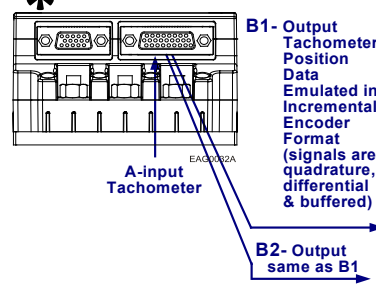Feedback A	Feedback B Ports B1 and B2		
Software Setting	YA[4] = 4	YA[4] = 2	YA[4] = 0
<b>Incremental Encoder Input</b> ★			
<b>Interpolated Analog (Sine/Cosine) Encoder Input</b> ★			
<b>Resolver Input</b> ★			
<b>Tachometer Input</b> *			

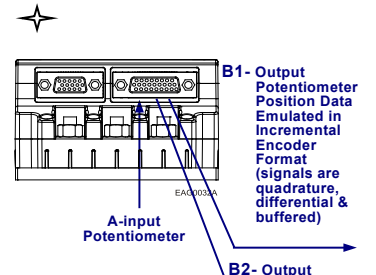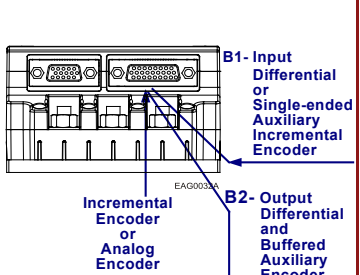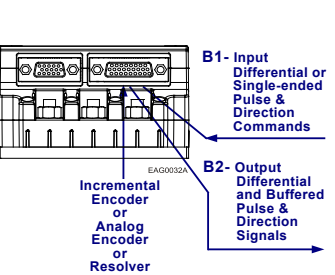Feedback A		Feedback B Ports B1 and B2		
Software Setting	YA[4] = 4	YA[4] = 2	YA[4] = 0	
Potentiometer Input				
Typical Applications	<ul style="list-style-type: none"> <li>★ Any application where the main encoder is used, not only for the drive, but also for other purposes such as position controllers and/or other drives.</li> <li>★ Analog Encoder applications where position data is required in the Encoder's quadrature format.</li> <li>★ Resolver applications where position data is required in the Encoder's quadrature format.</li> <li>★ Tachometer applications where velocity data is required in the Encoder's quadrature format.</li> <li>✦ Absolute Encoder applications where position data is required in the Encoder's quadrature format.</li> </ul>	<p>Any application where two feedbacks are used by the drive.</p> <p>Port B1 serves as an input for the auxiliary incremental encoder (differential or single-ended).</p> <p>Port B2 is used to output differential buffered Auxiliary Incremental Encoder signals.</p> <p>For applications such as Follower, ECAM, or Dual Loop.</p>	<p>Port B1 serves as an input for Pulse &amp; Direction commands (differential or single-ended).</p> <p>Port B2 is used to output differential buffered Pulse &amp; Direction signals.</p>	

### 3.4.6. Auxiliary Feedback (Feedback B)

When using one of the auxiliary feedback options, the relevant functionality of Feedback B ports are software selected for that option. Refer to the *SimpliQ Command Reference Manual* for detailed information about Feedback B setup. When assembling the Main Feedback cable, follow the instructions in Section 3.4.3 (*Feedback Control and Communication Cable Assemblies*).



**Note:** The Feedback connector also supports Feedbacks A and B.

### 3.4.6.1. Main Encoder Buffered Outputs or Emulated Encoder Outputs Option on Feedback B (YA[4]=4)

Through Feedback B (Ports B1 and B2) the Eagle can provide **two simultaneous buffered main, or emulated, encoder signals** to other controllers or drives. This option can be used when:

- The Eagle is used as a current amplifier to provide position data to the position controller.
- The Eagle is used in velocity mode, to provide position data to the position controller.
- The Eagle is used as a master in Follower or ECAM mode.

Below are the signals on the Auxiliary Feedback ports when set up to run as a buffered outputs or emulated outputs of the main encoder (on Feedback A):

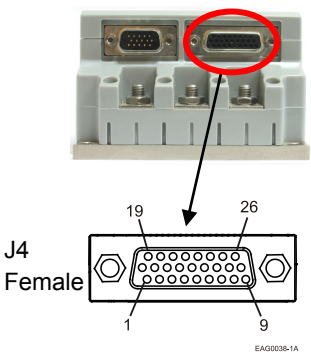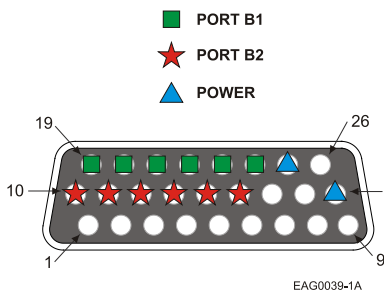
Port	Pin	Signal	Function	Pin Positions
B2	10	CHAO	Buffered channel A output	
B2	11	CHAO-	Buffered channel A complement output	
B2	12	CHBO	Buffered channel B output	
B2	13	CHBO-	Buffered channel B complement output	
B2	14	INDEXO	Buffered Index output	
B2	15	INDEXO-	Buffered Index complement output	 <p><b>26 Pin high density D-Sub Socket</b></p>
PWR	18	SUPRET	Encoder supply voltage return/COMRET	
B1	19	CHA	Auxiliary channel A high <i>output</i>	
B1	20	CHA-	Auxiliary channel A low <i>output</i>	
B1	21	CHB	Auxiliary channel B high <i>output</i>	
B1	22	CHB-	Auxiliary channel B low <i>output</i>	
B1	23	INDEX	Auxiliary Index high <i>output</i>	
B1	24	INDEX-	Auxiliary Index low <i>output</i>	
PWR	25	+5V	Encoder supply voltage	

**Table 9: Main Encoder Buffered Outputs or Emulated Encoder Outputs on Feedback B – Pin Assignments**



**Note:** In models not containing absolute encoder support, it is possible to use terminals 16 and 17 for SUPRET connections.

Feedback B on the “top” of the Eagle has a 26-pin high density D-Sub socket. Connect the Auxiliary Feedback cable, from the controller or other device, to Feedback B using a 26-pin, high density D-Sub plug with a metal housing. When assembling the Auxiliary Feedback cable, follow the instructions in Section 3.4.30(*Feedback Control and Communication Cable Assemblies*).


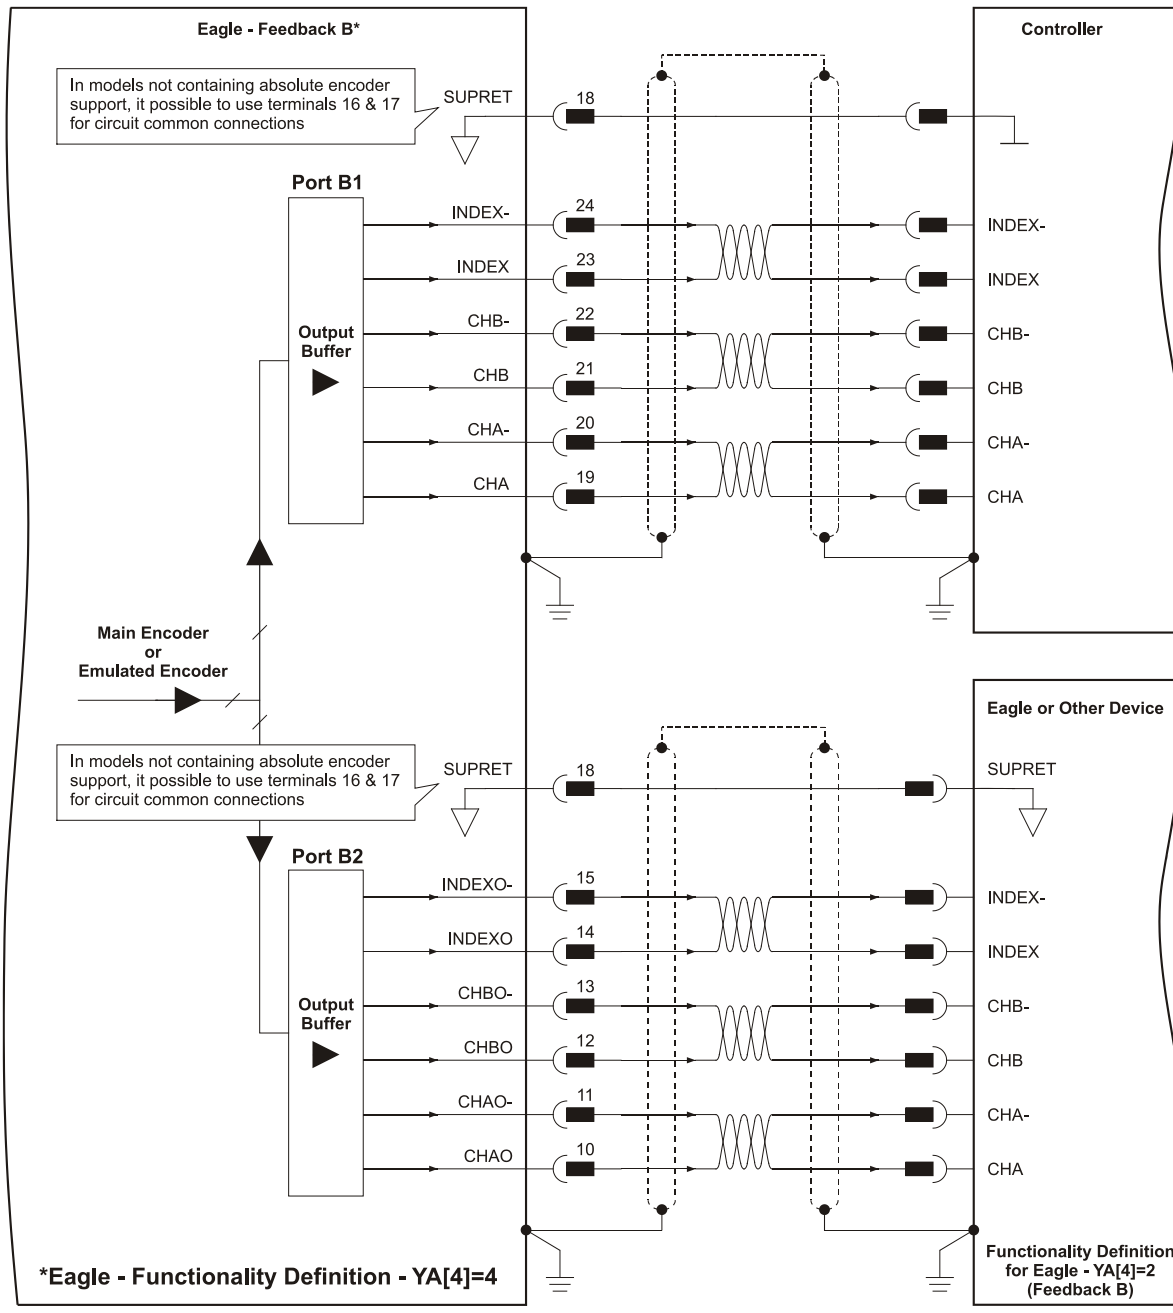


**Figure 23: Main Encoder Buffered Output or Emulated Encoder Output on Feedback B - Connection Diagram**

### 3.4.6.2. Differential Auxiliary Encoder Input Option on Feedback B (YA[4]=2)

The Eagle can be used as a slave by receiving the position of the master encoder data (on Port B1) in Follower or ECAM mode. In this mode Port B2 provides **differential buffered auxiliary outputs** for the next slave axis in follower or ECAM mode.


Below are the signals on the Auxiliary Feedback port when set up to run as a differential auxiliary encoder input:

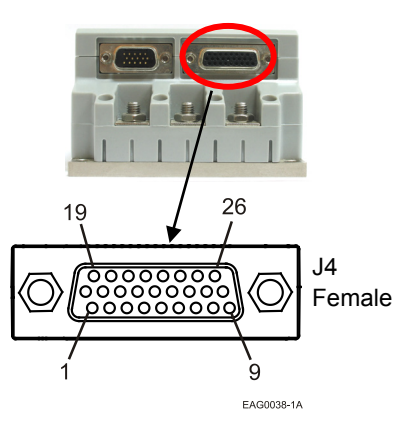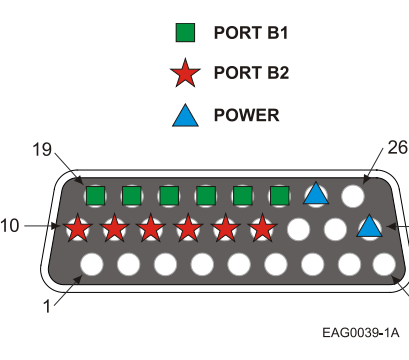Port	Pin	Signal	Function	Pin Positions
B2	10	CHAO	Buffered channel A output	
B2	11	CHAO-	Buffered channel A complement output	
B2	12	CHBO	Buffered channel B output	
B2	13	CHBO-	Buffered channel B complement output	
B2	14	INDEXO	Buffered Index output	
B2	15	INDEXO-	Buffered Index complement output	
PWR	18	SUPRET	Encoder supply voltage return/COMRET	 <p style="text-align: center;"><b>26-Pin High Density D-Sub Socket</b></p>
B1	19	CHA	Auxiliary channel A high <i>input</i>	
B1	20	CHA-	Auxiliary channel A low <i>input</i>	
B1	21	CHB	Auxiliary channel B high <i>input</i>	
B1	22	CHB-	Auxiliary channel B low <i>input</i>	
B1	23	INDEX	Auxiliary Index high <i>input</i>	
B1	24	INDEX-	Auxiliary Index low <i>input</i>	
PWR	25	+5V	Encoder supply voltage	

**Table 10: Differential Auxiliary Encoder Input Option on Feedback B  
Pin Assignments**

**Note:** In models not containing absolute encoder support, it is possible to use terminals 16 and 17 for SUPRET connections and use terminal 26 for +5V connection.

Feedback B on the “top” of the Eagle has a 26-pin high density D-Sub socket. Connect the Auxiliary Feedback cable from the feedback device to Feedback B using a 26-pin, high density D-Sub plug with a metal housing. When assembling the Auxiliary Feedback cable, follow the instructions in Section 3.4.3 (*Feedback Control and Communication Cable Assemblies*).

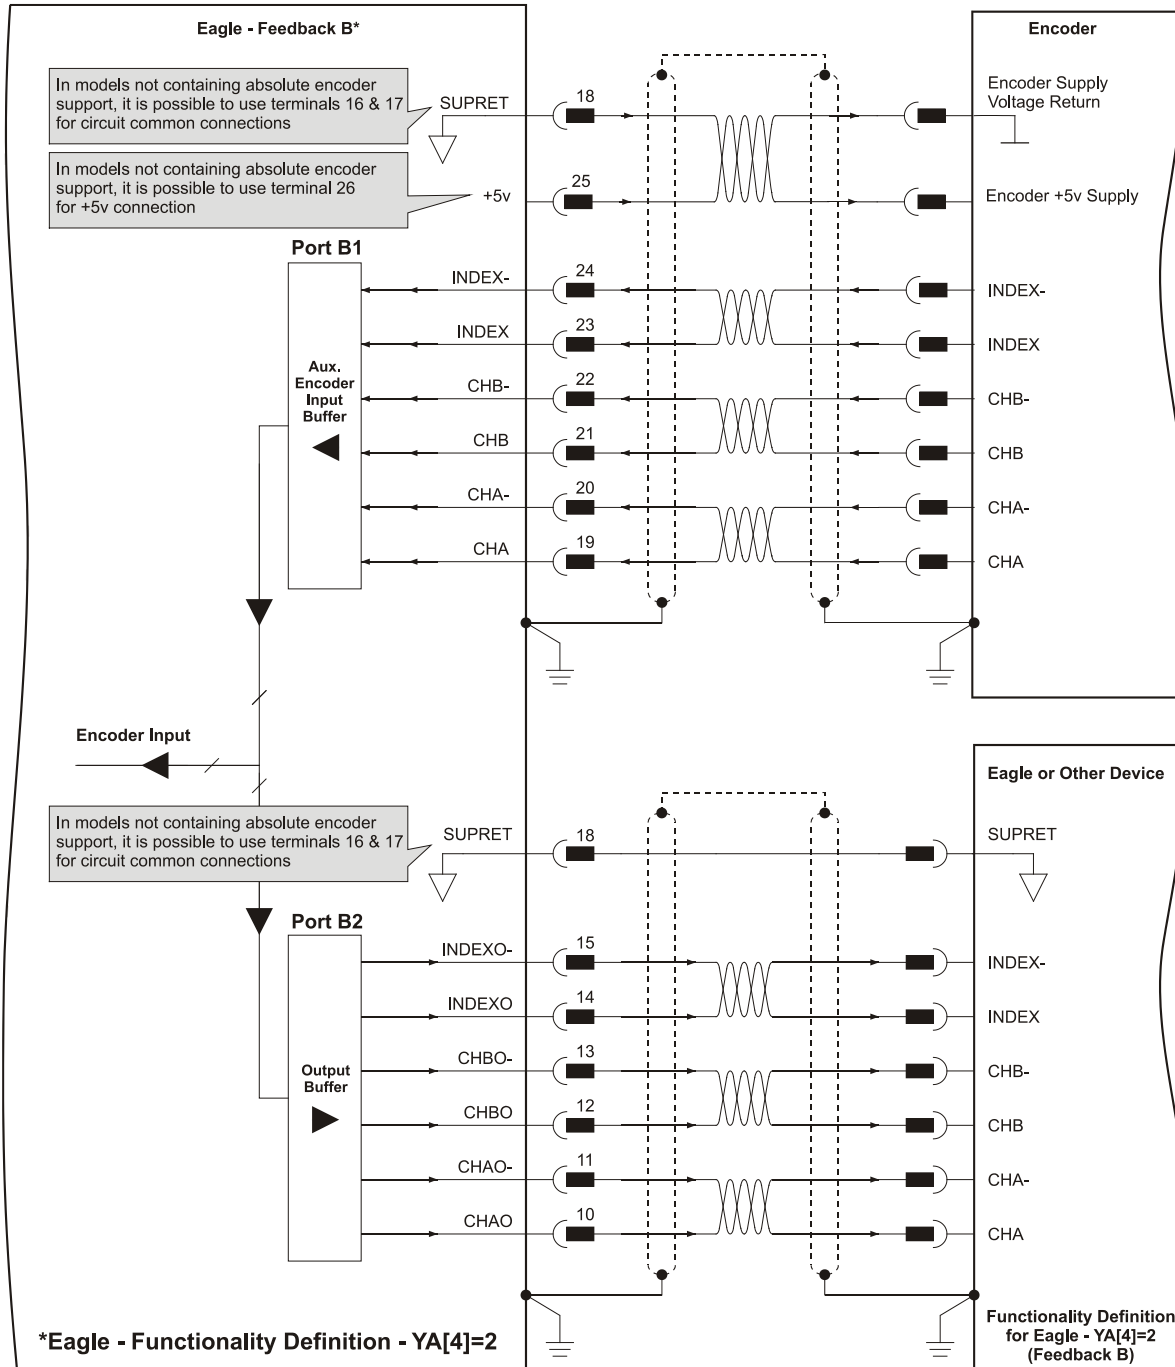




EAG0022A

**Figure 24: Differential Auxiliary Encoder Input Option on Feedback B - Connection Diagram**

### 3.4.6.3. Single-Ended Auxiliary Input Option on Feedback B (YA[4]=2)

The Eagle can be used as a slave by receiving the position data (on Port B1) of the master encoder in Follower or ECAM mode. In this mode Port B2 provides **differential buffered auxiliary outputs** for the next slave axis in Follower or ECAM mode.

Below are the signals on the Auxiliary Feedback ports when set up to run as a single-ended auxiliary input:

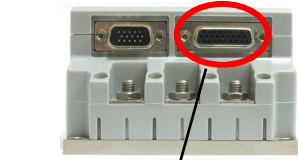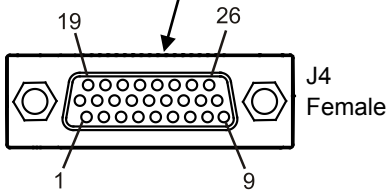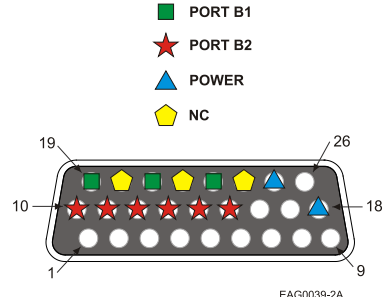
Port	Pin	Signal	Function	Pin Positions
B2	10	CHAO	Channel A output	  EAG0038-1A <b>26-Pin High Density D-Sub Plug</b>
B2	11	CHAO-	Channel A complement output	
B2	12	CHBO	Channel B output	
B2	13	CHBO-	Channel B complement output	
B2	14	INDEXO	Index output	
B2	15	INDEXO-	Index complement output	
PWR	18	SUPRET	Encoder supply voltage return/ COMRET	 EAG0039-2A <b>26-Pin High Density D-Sub Socket</b>
B1	19	CHA	Auxiliary channel A high <i>input</i>	
	20	NC	Do not connect this pin	
B1	21	CHB	Auxiliary channel B high <i>input</i>	
	22	NC	Do not connect this pin	
B1	23	INDEX	Auxiliary Index high <i>input</i>	
	24	NC	Do not connect this pin	
PWR	25	+5V	Encoder supply voltage	

**Table 11: Single-Ended Auxiliary Encoder Option on Feedback B – Pin Assignments**

**Note:** In models not containing absolute encoder support, it is possible to use terminals 16 and 17 for SUPRET connections and use terminal 26 for +5V connection.

Feedback B on the “top” of the Eagle has a 26-pin high density D-Sub socket. Connect the Auxiliary Feedback cable from the feedback device to Feedback B using a 26-pin, high density D-Sub plug

with a metal housing. When assembling the Auxiliary Feedback cable, follow the instructions in Section 3.4.3 (*Feedback Control and Communication Cable Assemblies*).

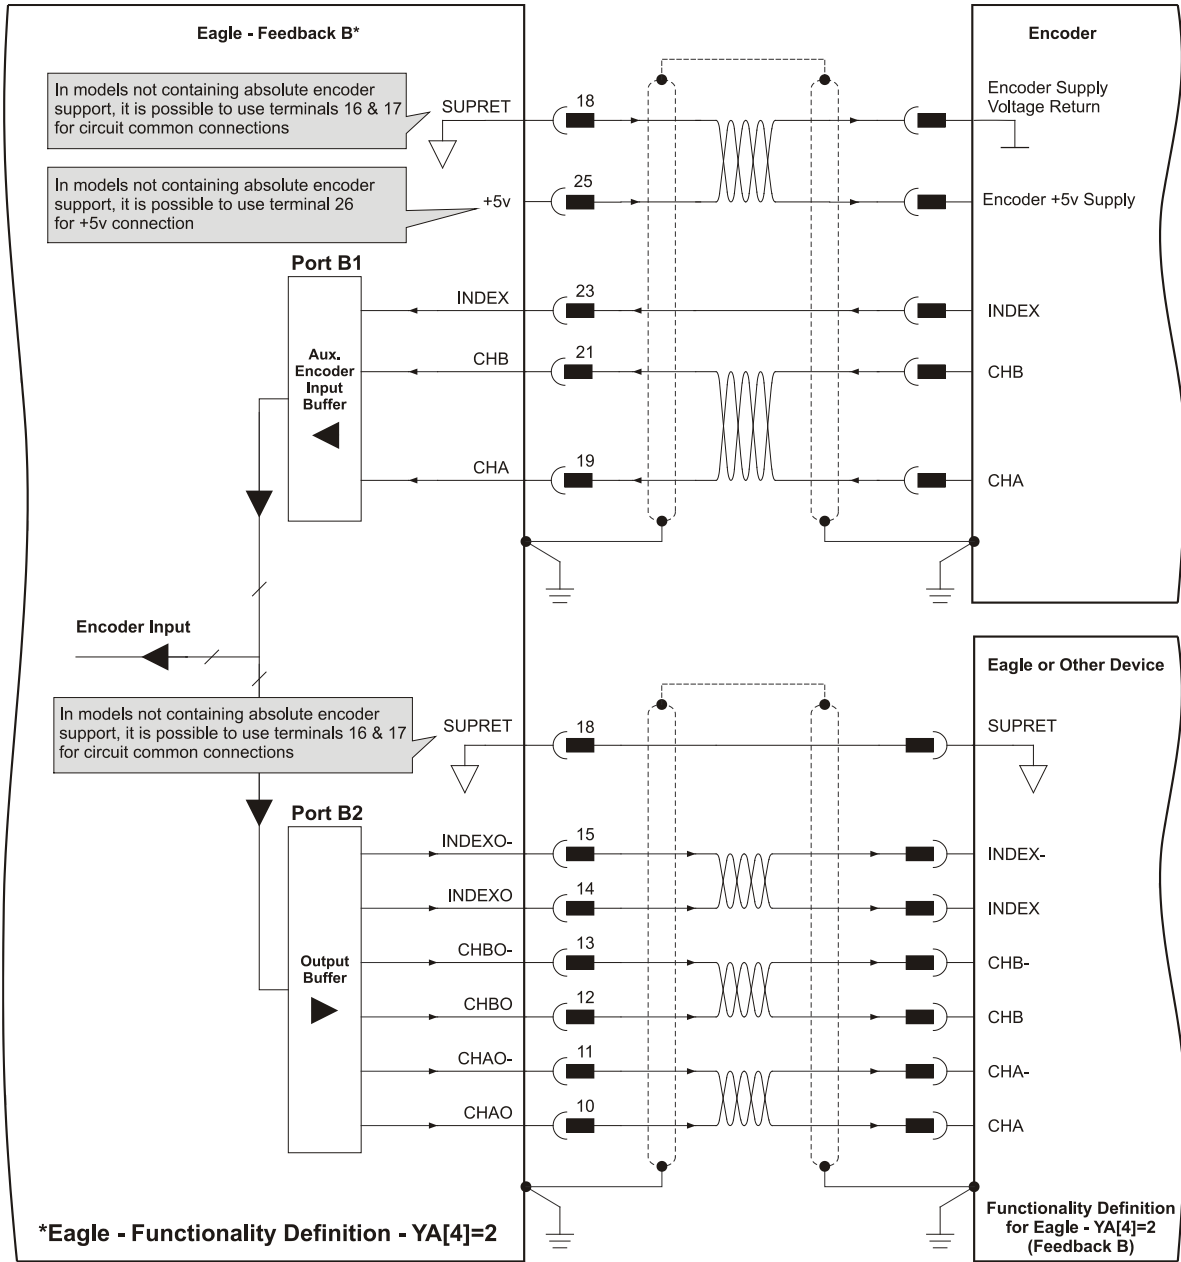



EAG0021A

**Figure 25: Single-Ended Auxiliary Input Option on Feedback B – Connection Diagram**

### 3.4.6.4. Pulse-and-Direction Input Option on Feedback B (YA[4]=0)

This mode is used for input of differential or single-ended pulse-and-direction position commands on Port B1. In this mode Port B2 provides **differential buffered pulse-and-direction outputs** for another axis.


Below are the signals on the Auxiliary Feedback ports when set up to run as a single-ended pulse-and-direction input:

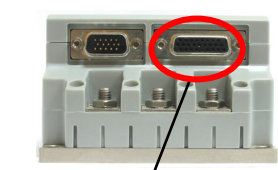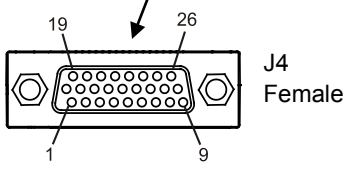Port	Pin	Signal	Function	Pin Positions
B2	10	CHAO	Channel A output	  <p style="text-align: center;">EAG0038-1A</p> <p style="text-align: center;"><b>26-Pin D-Sub High Density Plug</b></p>
B2	11	CHAO-	Channel A complement output	
B2	12	CHBO	Channel B output.	
B2	13	CHBO-	Channel B complement output	
	14	NC	Do not connect this pin	
	15	NC	Do not connect this pin	
PWR	18	SUPRET	Encoder supply voltage return/ COMRET	
B1	19	PULS/CHA	Pulse/Auxiliary channel A high <i>input</i>	
	20	NC	Do not connect this pin	
B1	21	DIR/CHB	Direction/Auxiliary channel B high <i>input</i>	
	22	NC	Do not connect this pin	
	23	NC	Do not connect this pin	
	24	NC	Do not connect this pin	
PWR	25	+5V	Encoder supply voltage	

**Table 12: Single-Ended Pulse-and-Direction Auxiliary Encoder Pin Assignment on Feedback B**

**Note:** In models not containing absolute encoder support, it is possible to use terminals 16 and 17 for SUPRET connections.




Feedback B on the “top” of the Eagle has a 26-pin high density D-Sub socket. Connect the Auxiliary Feedback cable from the Pulse and Direction Controller to Feedback B using a 26-pin, high density D-Sub plug with a metal housing. When assembling the Auxiliary Feedback cable, follow the instructions in Section 3.4.3 (*Feedback Control and Communication Cable Assemblies*).

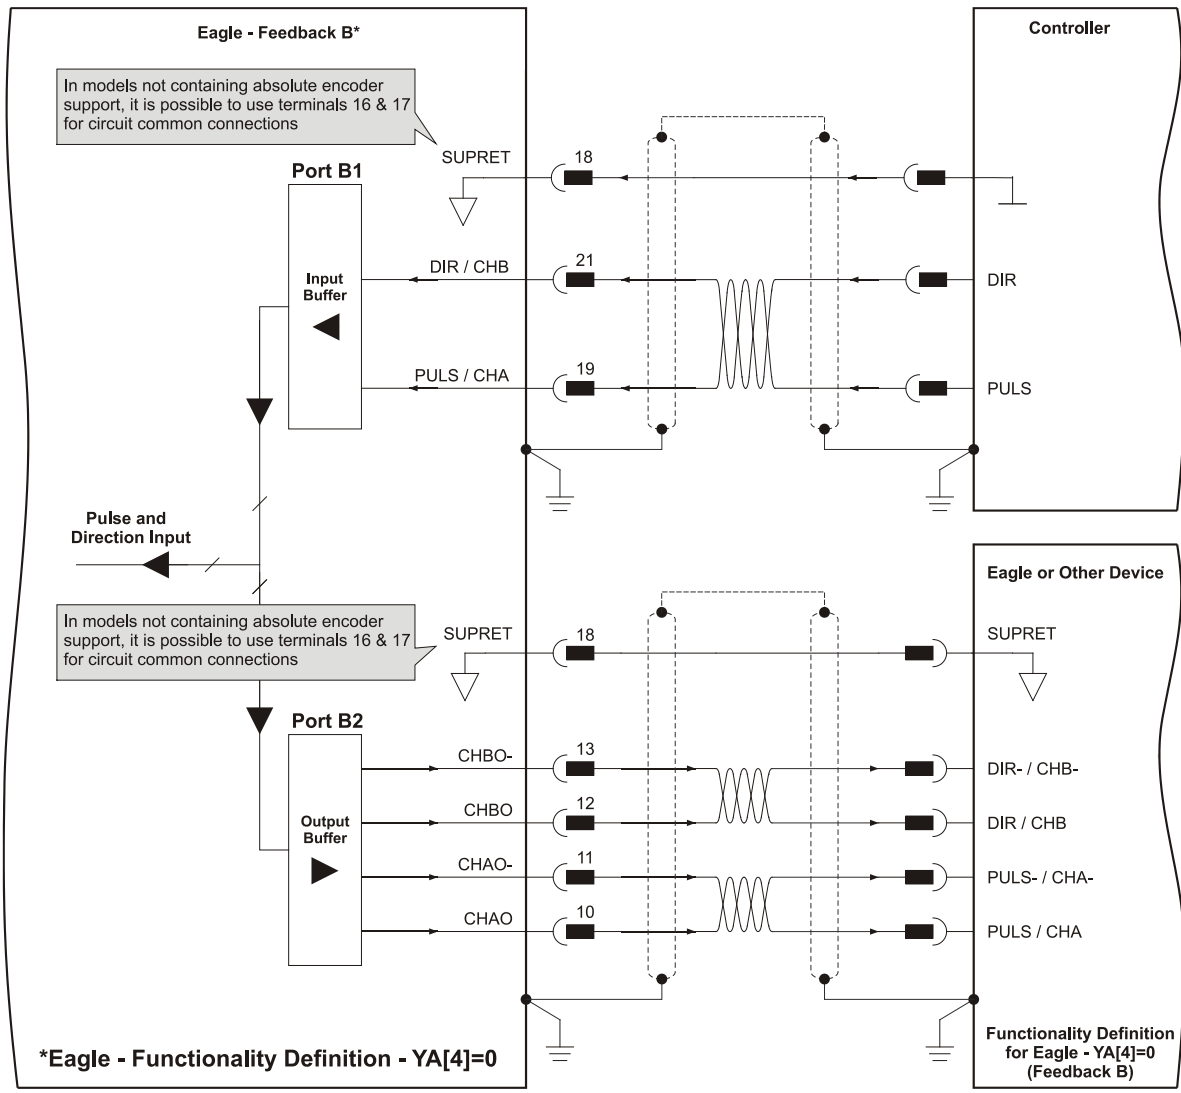

EAG0023A

**Figure 26: Single-Ended Pulse-and-Direction Input Option on Feedback B – Connection Diagram**


Below are the signals on the Auxiliary Feedback ports when set up to run as a differential pulse-and-direction input:

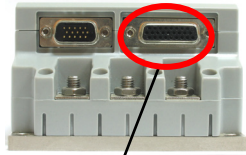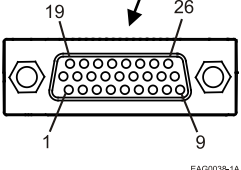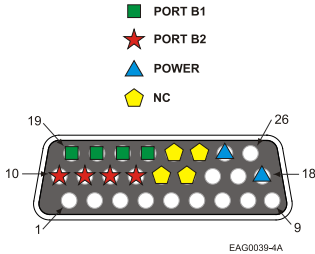Port	Pin	Signal	Function	Pin Positions
B2	10	CHAO	Channel A output	  J4 Female EAG0038-1A <b>26-Pin D-Sub High Density Plug</b>
B2	11	CHAO-	Channel A complement output	
B2	12	CHBO	Channel B output.	
B2	13	CHBO-	Channel B complement output	
	14	NC	Do not connect this pin	
	15	NC	Do not connect this pin	
PWR	18	SUPRET	Encoder supply voltage return/ COMRET	 EAG0039-4A <b>26-Pin D-Sub Socket</b>
B1	19	PULS/CHA	Pulse/Auxiliary channel A high <i>input</i>	
B1	20	PULS-/CHA-	Pulse/Auxiliary channel A complement high <i>input</i>	
B1	21	DIR/CHB	Direction/Auxiliary channel B high <i>input</i>	
B1	22	DIR-/CHB-	Direction/Auxiliary channel B complement high <i>input</i>	
	23	NC	Do not connect this pin	
	24	NC	Do not connect this pin	
PWR	25	+5V	Encoder supply voltage	

**Table 13: Differential Pulse-and-Direction Auxiliary Encoder Pin Assignment on Feedback B**

**Note:** In models not containing absolute encoder support, it is possible to use terminals 16 and 17 for SUPRET connections.



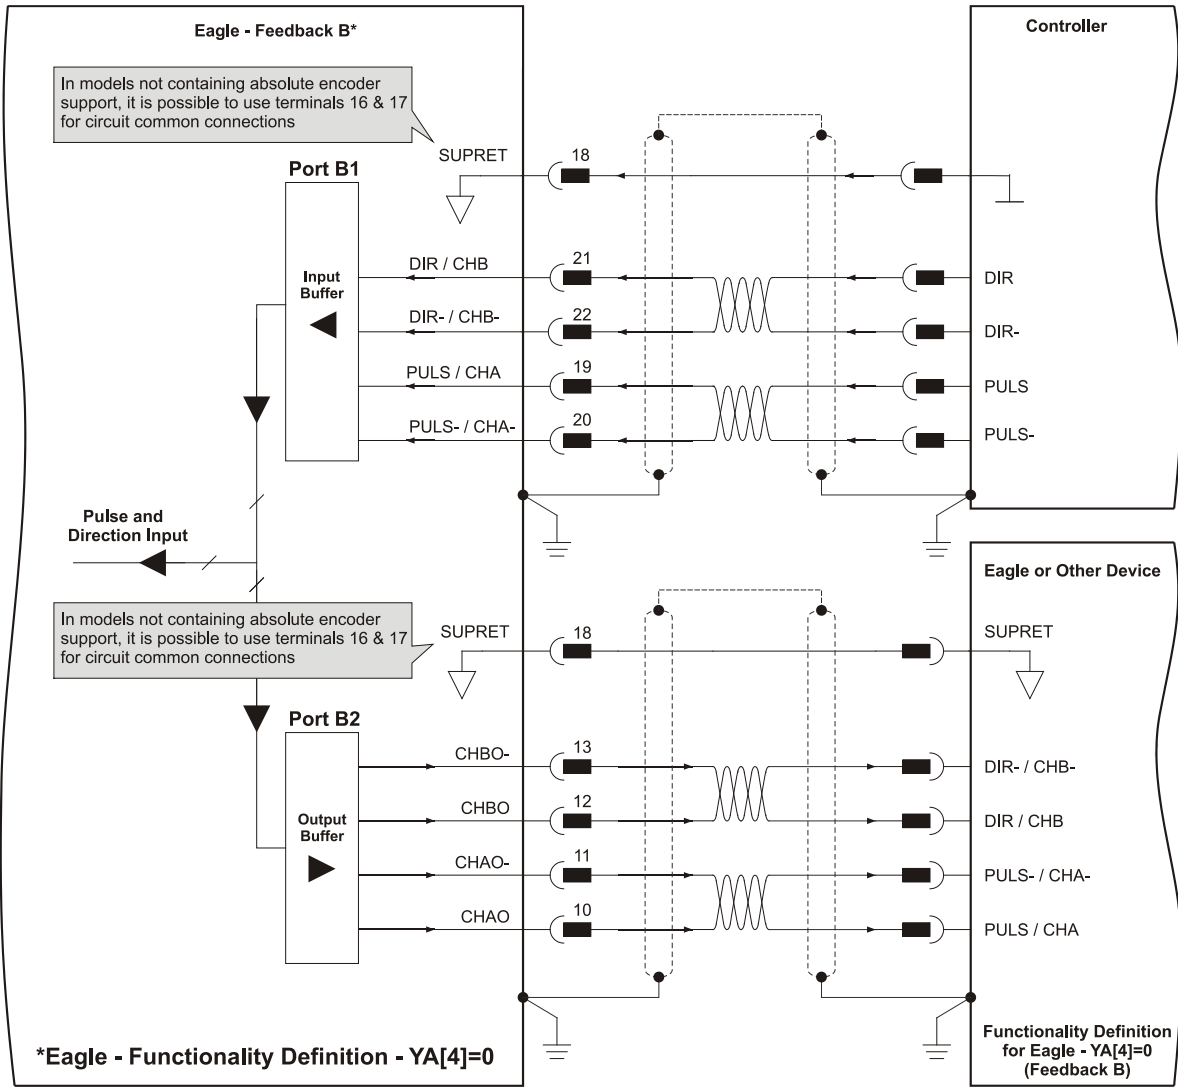

EAG0024A

**Figure 27: Differential Pulse-and-Direction Input Option on Feedback B - Connection Diagram**

### 3.4.7. I/O Cables

The Eagle has one I/O port, J3. J3 is a general I/O, which can be used to connect 6 digital inputs, 2 digital outputs and 1 analog input.

I/O	J3 Port
Digital Input	6
Digital Output	2
Analog Input	1

#### 3.4.7.1. General I/O Port (J3)

Port J3 has a 15-pin high density D-Sub plug. When assembling this I/O cable, follow the instructions in Section 3.4.30(*Feedback Control and Communication Cable Assemblies*) using a 15-pin high density metal case D-Sub female connector (socket).


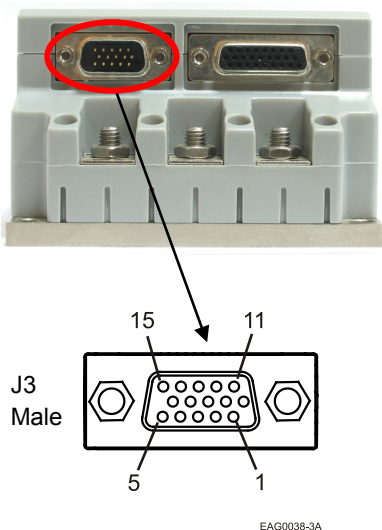
Pin	Signal	Function	Pin Positions
1	ANLIN+	Analog input +	 <p>J3 Male</p> <p>EAG0038-3A</p>
2	ANLIN-	Analog input -	
3	ANLRET	Analog return	
4	OUTRET2	Programmable output return 2	
5	OUT2	Programmable output 2	
6	IN6	Programmable input 6	
7	INRET	General input return	
8	INRET	General input return	
9	OUTRET 1	Programmable output return 1	
10	OUT1	Programmable output 1	
11	IN1	Programmable input 1	
12	IN2	Programmable input 2	
13	IN3	Programmable input 3	
14	IN4	Programmable input 4	
15	IN5	Programmable input 5	

Table 14: J3 I/O Cable – Pin Assignments

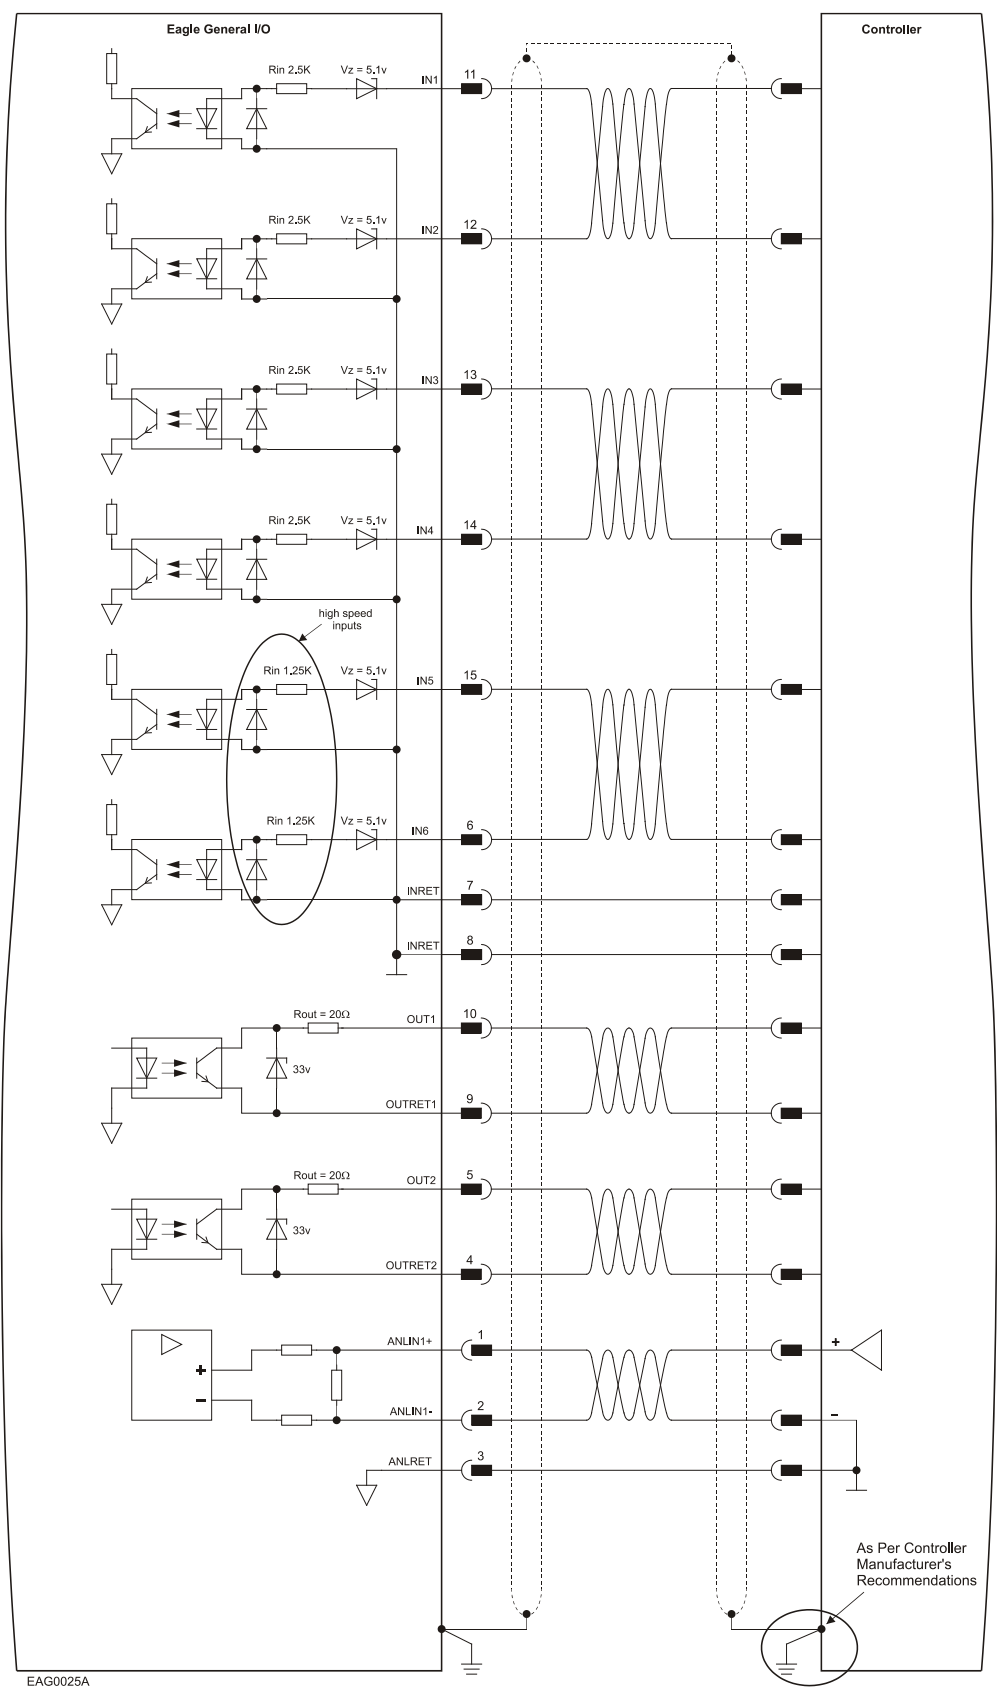

**Figure 28: General J1 I/O Connection Diagram**

### 3.4.8. Communication Cables

The communication cables use a 9-pin D-Sub plug that connect to the RS-232 and 9-pin D-Sub socket that connects to the CAN ports on the Eagle. The communication interface may differ according to the user's hardware. The Eagle can communicate using the following options:

- a. RS-232, full duplex
- b. CAN

**RS-232** communication requires a standard, commercial 3-core null-modem cable connected from the Eagle to a serial interface on the PC. The interface is selected and set up in the Composer software.

In order to benefit from **CAN** communication, the user must have an understanding of the basic programming and timing issues of a CAN network. The interface is electrically isolated by optocouplers. For ease of setup and diagnostics of CAN communication, RS-232 and CAN may be used simultaneously.

#### 3.4.8.1. RS-232 Communication

##### Notes for connecting the RS-232 communication cable:

- Use a 24, 26 or 28 AWG twisted pair shielded cable (24 AWG cable is recommended). The shield should have aluminum foil covered by copper braid with a drain wire.
- Connect the shield to the ground of the host (PC). Usually, this connection is soldered internally inside the connector at the PC end. You can use the drain wire to facilitate connection.
- Use only a D-Sub connector with a **metal housing**.
- Attach the braided shield tightly to the metal housing of the D-type connector.
- When assembling the Communication cable, follow the instructions in Section 3.4.3 (*Feedback Control and Communication Cable Assemblies*).

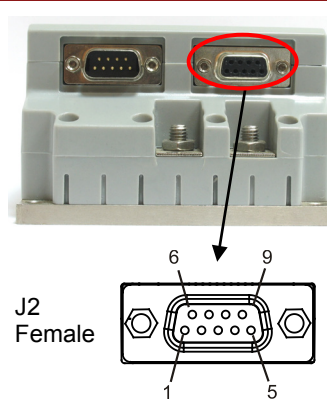
Pin	Signal	Function	Pin Locations
1	—	—	
2	Tx	RS-232 transmit	
3	Rx	RS-232 receive	
4	—	—	
5	COMRET	Communication return	
6, 7, 8	—	—	

Table 15: RS-232 Cable – Pin Assignments

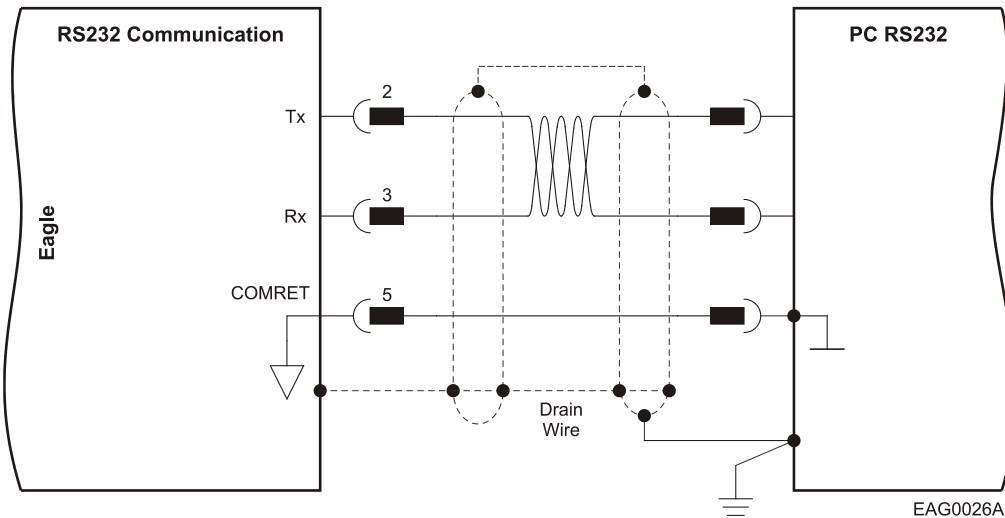


Figure 29: RS-232 Connection Diagram


### 3.4.8.2. CAN Communication

#### Notes for connecting the CAN communication cable:

- Use 24, 26 or 28 AWG twisted pair shielded cables (24 AWG cable is recommended). For best results, the shield should have aluminum foil and covered by copper braid with a drain wire
- Connect the shield to the ground of the host (PC). Usually, this connection is soldered internally inside the connector at the PC end. You can use the drain wire to facilitate connection.
- Use only a D-Sub connector with a **metal housing**.
- Attach the braid shield tightly to the metal housing of the D-type connector.
- Connect a termination 120-Ω resistor at each of the two ends of the network cable.
- When assembling the Communication cable, follow the instructions in Section 3.4.3 (*Feedback Control and Communication Cable Assemblies*).

Pin	Signal	Function	Pin Positions
1	—	—	<p>J1 Male</p> <p>EAG0038-4A</p>
2	CAN_L	CAN_L busline (dominant low)	
3	CAN_GND	CAN ground	
4	—	—	
5	CAN_SHLD	Shield, attach to the metal housing of the D-type	
6	CAN_GND	CAN Ground	
7	CAN_H	CAN_H busline (dominant high)	
8	—	Aux. supply – see Section 3.4.2.2.a.	
9	—	Aux. supply – see Section 3.4.2.2.a.	

Table 16: CAN Cable – Pin Assignments

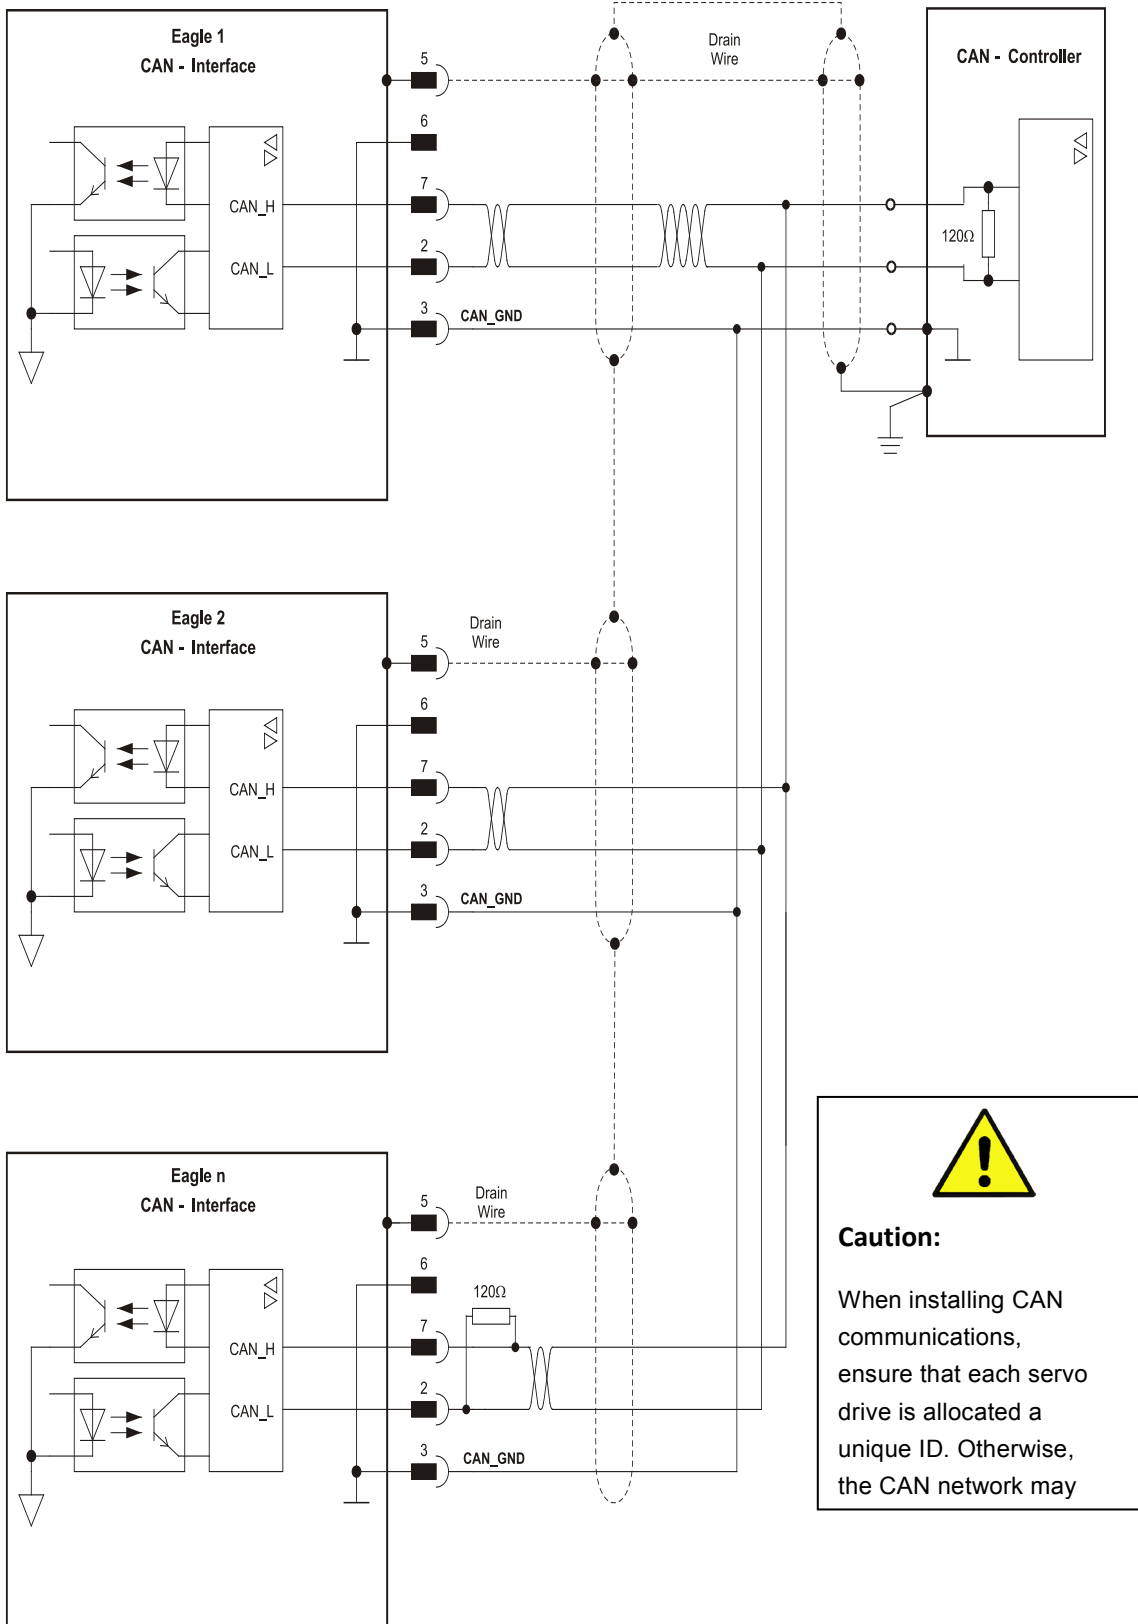

EAG0027A

**Figure 30: CAN Connection Diagram**

## 3.5. DC Power Supply

The DC power supply can be at any voltage in the range defined in the technical specifications (see the Appendix of this manual). The supply source must comply with the safety aspects of the relevant requirements, in accordance with the most recent version of the standard **EN 60950** or equivalent Low Voltage Directive Standard, all according to the applicable overvoltage category. If the power source to the power supply is the AC line (through an isolated or a **non**-isolated transformer), safety margins must be con in order to avoid activating the undervoltage/overvoltage protection due to line variations and/or voltage drop under load.

In addition to the above, the transformer must comply with the safety aspects of the relevant requirements in accordance with the most recent version of the standard **EN 60742** (Isolating and Safety Isolating Transformers). The nominal DC bus voltage should be in the following range:

$$1.2 V_{dcmin} < V_{dc} < 0.9 V_{dcmax}$$

Where:

$V_{dcmin}$  is the minimum DC bus

$V_{dcmax}$  is the maximum DC bus

The transformer power should be calculated such that it will be able to deliver power to the amplifier (including peak power) without significant voltage drops.

The power supply should be located as close as possible to the amplifier. While driving high-inertia loads, the power supply must be equipped with a shunt regulator; otherwise, the amplifier will be disabled whenever the capacitors are charged above the maximum voltage, during motor break down.

### 3.5.1. Powering Up

After the Eagle has been mounted, check that the cables are intact. The Eagle servo drive is then ready to be powered up.



**Caution:** Before applying power, ensure that the DC supply is within the range specified for your specific type of Eagle and that the proper plus-minus connections are in order.

### 3.5.2. Initializing the System

After the Eagle has been connected and mounted, the system must be set up and initialized. This is accomplished using the *Composer*, Elmo's Windows-based software application. Install the application and then perform setup and initialization according to the directions in the *Composer Software Manual*.

## 3.6. Heat Dissipation

For full power output capability the Eagle is designed to be mounted on an external heat sink. It is highly recommended that the “Wall” on which the Eagle is mounted will have heat dissipation capabilities. The Eagle at “free air convection” (without an additional heat sink) can dissipate around 12 W for 40 °C ambient temperature and not exceeding 80 °C on the heat sink.

When “Free Air Convection” is sufficient for the application it is recommended to leave approximately 10 mm of space between the Eagle's heat sink and any other assembly.


### 3.6.1. Eagle Thermal Data


- Free air convection thermal resistance ( $\theta$ ): Approximately 3.6 – 4 °C/W.
- Thermal time constant: Approximately 40 minutes/2400 seconds (the thermal time constant means that the Eagle will reach two thirds of its final temperature after 4 minutes).
- Self heat dissipation capability (no external heat sink): 12 W for 40 °C/W temperature rise.
- Shut-off temperature: 86 °C – 88 °C (measured on the heat sink).
- The thermal resistance when connecting to an external heat sink:
  - The surface of the external heat sink is 50  $\mu\text{m}$ : 0.18 °C/W.
  - Thermal conductive compound. By proper Smearing of the surface a significant improvement of the thermal resistance is achieved: 0.13 °C/W



### 3.6.2. Heat Dissipation Data

Heat Dissipation is shown in graphically below:

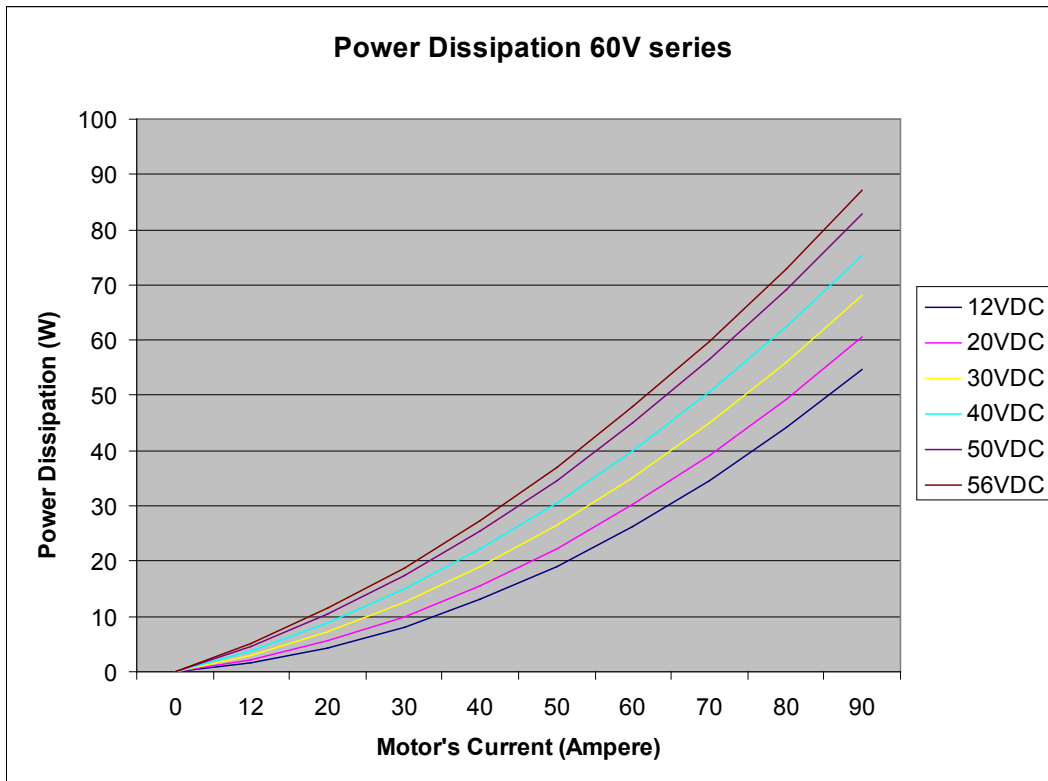

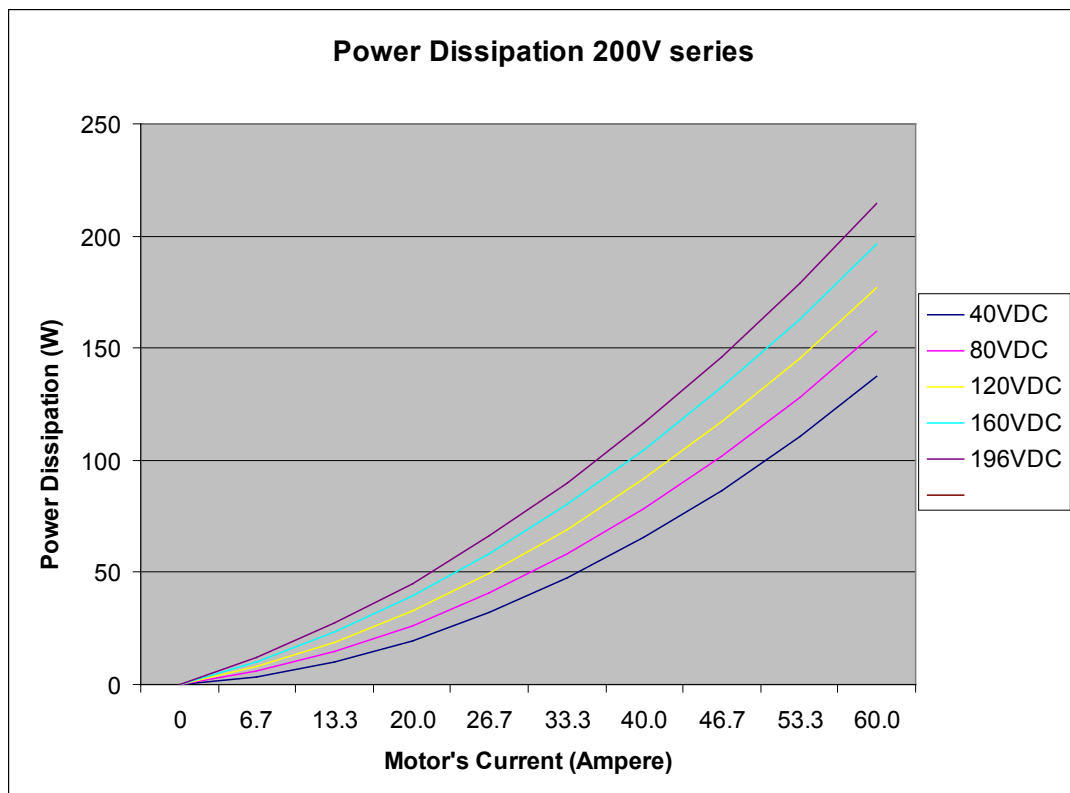

### 3.6.3. How to Use the Charts

The charts above are based upon theoretical worst-case conditions. Actual test results show 30% - 50% better power dissipation.

*To determine if your application needs a heat sink:*

1. Allow maximum heat sink temperature to be 80°C or less (shunt down is 6 °C to 8 °C higher).
2. Determine the ambient operating temperature of the Eagle as  $\leq 40$  °C.
3. Calculate the allowable temperature increase as follows: For an ambient temperature of 40°C ,  
 $\Delta T = 80$  °C – 40 °C = 40 °C
4. Use the chart to find the actual dissipation power of the drive. Follow the voltage curve to the desired output current and then find the dissipated power.
5. If the dissipated power is below 12 W the Eagle needs no additional cooling.

**Note:** The chart above shows that no heat sink is needed when the heat sink temperature is 80 °C, ambient temperature is 40 °C and heat dissipated is 4 W.

## ***Chapter 4: Technical Specifications***

This chapter provides detailed technical information regarding the Eagle. This includes its dimensions, power ratings, the environmental conditions under which it can be used, the standards to which it complies and other specifications.

### **4.1. Features**

The Eagle's features determine how it controls motion, as well as how it processes host commands, feedback and other input.

#### **4.1.1. Motion Control Modes**

- Current/Torque - up to 14 kHz sampling rate
- Velocity - up to 7 kHz sampling rate
- Position - up to 3.5 kHz sampling rate

#### **4.1.2. Advanced Positioning Control Modes**

- PTP, PT, PVT, ECAM, Follower, Dual Loop
- Fast event capturing inputs
- Fast output compare (OC)
- Motion Commands: Analog, Pulse-Width Modulation (PWM), digital (SW) and Pulse and Direction

#### **4.1.3. Advanced Filters and Gain Scheduling**

- "On-the-Fly" gain scheduling of current and velocity
- Velocity and position with "1-2-4" PIP controllers
- Automatic commutation alignment
- Automatic motor phase sequencing

#### **4.1.4. Fully Programmable**

- Third generation programming structure with motion commands- "Composer"
- Event capturing interrupts
- Event triggered programming
- 32 KB memory

#### **4.1.5. Feedback Options**

- Incremental Encoder – up to 20 Mega-Counts (5 Mega-Pulse) per second
- Digital Halls – up to 2 kHz
- Tachometer and potentiometer (optional)
- Incremental Encoder with Digital Halls for commutation – up to 20 Mega-Counts per second for encoder
- Interpolated Analog (Sine/Cosine) Encoder – up to 250 kHz (analog signal)
  - Internal Interpolation - up to x4096
  - Automatic correction of amplitude mismatch, phase mismatch, signal offset
  - Differential encoder buffered outputs
- Resolver (optional)
  - Programmable 10 to 15 bit resolution
  - Up to 512 revolutions per seconds (RPS)
  - Encoder outputs
  - A, B, Index
  - Differential encoder buffered outputs
  - Quadrate
- Absolute Encoder - Heidenhain 2.1 and Stegmann
  - Sine/Cosine Encoder– up to 250 kHz
  - Internal Interpolation - up to x4096
  - Automatic correction of amplitude mismatch, phase mismatch, signal offset
  - Differential encoder buffered outputs
- Auxiliary Encoder inputs (ECAM, follower, etc.)
  - A, B, Index
  - Differential encoder buffered outputs
  - Quadrate

#### **4.1.6. Input/Output**

- **Analog Input**– up to 14-bit resolution
- Six programmable **Digital Inputs**, optically isolated, PLC level
  - Inhibit/Enable motion
  - Software and analog reference stop
  - Motion limit switches
  - Begin on input
  - Abort motion
  - Homing
  - General-purpose
- Fast event capture inputs, optically isolated

- Two programmable **Digital Outputs**, optically isolated (open, emitter and collector)
  - Brake Control
  - Amplifier fault indication
  - General-purpose
  - Servo enable indication
- Differential emulated outputs of the resolver, interpolated analog encoder, tachometer and absolute encoder
- Fast output compare (OC), optically isolated
- Pulse and Direction inputs (single-ended and differential)
- PWM current command output

#### **4.1.7. Built-In Protection**

- Software error handling
- Abort (hard stops and soft stops)
- Status reporting
- Protection against:
  - Shorts between motor power outputs
  - Shorts between motor power output and power input/return
  - Failure of internal power supplies
  - Over temperature
  - Cont. temperature measurement. Temperature can be read on the fly; a warning can be initiated x degrees before temp disable is activated.
  - Over/Under voltage
  - Loss of feedback
  - Following error
  - Current limits
  - Loss of commutation signals
  - Communication error




#### **4.1.8. Accessories**

- Cable Kit

### 4.1.9. Automatic Procedures

- Commutation alignment
- Phase sequencing
- Current loop offset adjustment
- Current loop gain tuning
- Current gain scheduling
- Velocity loop offset adjustment
- Velocity gain tuning
- Velocity gain scheduling
- Position gain tuning

### 4.2. Dimensions

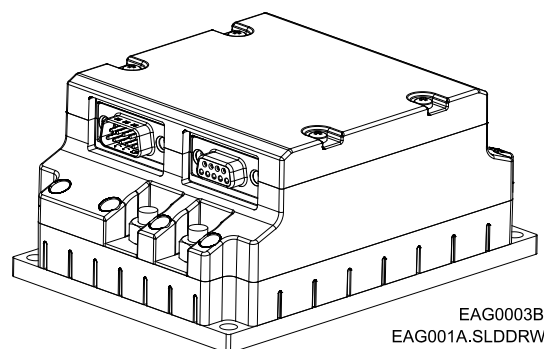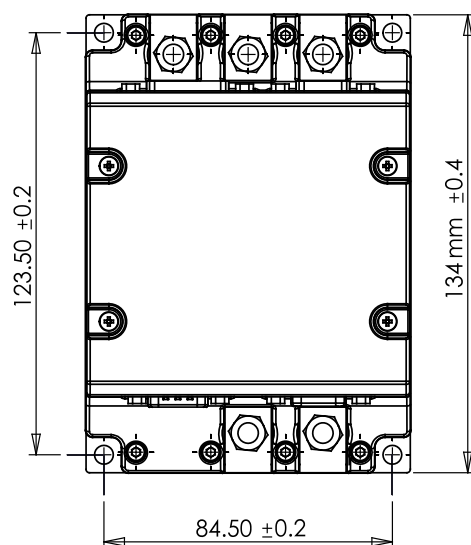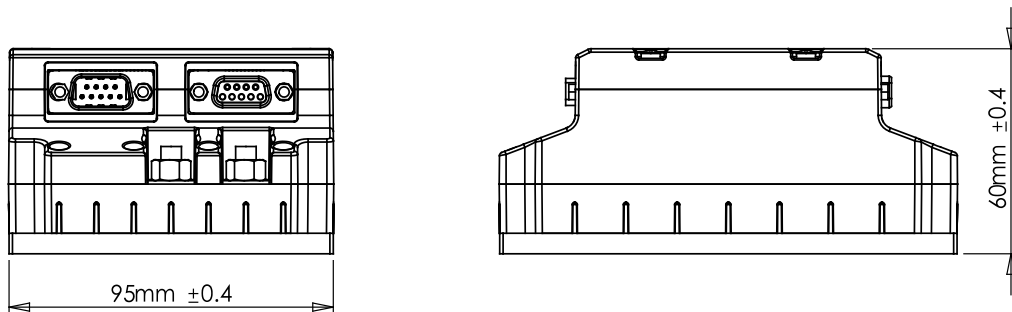

### 4.3. Power Ratings up to 100 V

Feature	Units	70/48	70/60	R90/60	100/60	50/100	R75/100	100/100
Minimum supply voltage	VDC	11	14			23		
Nominal supply voltage	VDC	42	50			85		
Maximum supply voltage	VDC	48	59			95		
Maximum continuous power output	W	2700	3400	4300	4900	4000	6000	7900
Efficiency at rated power (at nominal conditions)	%	> 97						
Maximum output voltage		97% of DC bus voltage at f=22 kHz						
Amplitude sinusoidal/DC continuous current (Ic)	A	70	70	90	100	50	75	100
Sinusoidal continuous RMS current limit (Ic)	A	50	50	63	70.7	35	53	70.7
Peak current limit	A	2 x Ic	2 x Ic	No Peak	2 x Ic		No Peak	2 x Ic
Weight	g (oz)	700 g (24.7 oz)						
Dimensions	mm (in)	134 x 95 x 60 (5.3" x 3.7" x 2.4")						
Digital in/Digital out/Analog in		6/2/1						
Mounting method		Panel mount						



## 4.1. Power Ratings from 200 to 400 V

Feature	Units	35/200	R60/200	18/400
Minimum supply voltage	VDC	46		92
Nominal supply voltage	VDC	170		340
Maximum supply voltage	VDC	195		390
Maximum continuous power output	W	5600	9600	5600
Efficiency at rated power (at nominal conditions)	%	> 97		
Maximum output voltage		97% of DC bus voltage at f=22 kHz		
Amplitude sinusoidal/DC continuous current (Ic)	A	35	60	18
Sinusoidal continuous RMS current limit (Ic)	A	25	42	12.7
Peak current limit	A	2 x Ic	No Peak	2 x Ic
Weight	g (oz)	700 g (24.7 oz)		
Dimensions	mm (in)	134 x 95 x 60 (5.3" x 3.7" x 2.4")		
Digital in/Digital out/Analog in		6/2/1		
Mounting method		Panel mount		
Auxiliary power supply				Isolated DC source only
Auxiliary supply input voltage	VDC			24 ± 20%
Auxiliary supply input power	VA			7

### 4.1.1. Auxiliary Supply

Feature	Details
Auxiliary power supply	<i>Isolated DC source only</i>
Auxiliary supply input voltage	12 VDC to 195 VDC
Auxiliary supply input power	< 7 VA

## 4.2. Environmental Conditions

The ExtriQ products are designed, manufactured and tested to meet extreme environmental conditions. The **ExtriQ durability** is qualified, verified and tested according to the most severe environmental, EMC and safety standards exceeding the traditional and senior military Standards.

The ExtriQ series of drives support the following extended environmental conditions.

Feature	Operation Conditions	Range
<b>Ambient Temperature Range</b>	Non-operating conditions	-50 °C to +100 °C (-58 °F to 212 °F)
	Operating conditions	-40 °C to +70 °C (-40 °F to 160 °F)
<b>Temperature Shock</b>	Non-operating conditions	-40 °C to +70 °C (-40 °F to 160 °F) within 3 min
<b>Altitude</b>	Non-operating conditions	Unlimited
	Operating conditions	-400 m to 12,000 m (-1312 to 39370 feet)
<b>Humidity</b>	Non-operating conditions	Up to 95% non-condensing humidity at 35 °C (95 °F)
	Operating conditions	Up to 95% non-condensing humidity at 25 °C (77 °F), up to 90% non-condensing humidity at 42 °C (108 °F)
<b>Vibration</b>	Operating conditions	20 Hz to 2000 Hz, 14.6g
<b>Mechanical Shock</b>	Non-operating conditions	±40g; Half sine, 11 msec
	Operating conditions	±20g; Half sine, 11 msec

## 4.3. Control Specifications

### 4.3.1. Current Loop

Feature	Details
Controller type	Vector, digital
Compensation for bus voltage variations	"On-the-fly" automatic gain scheduling
Motor types	<ul style="list-style-type: none"> <li>• AC brushless (sinusoidal)</li> <li>• DC brushless (trapezoidal)</li> <li>• DC brush</li> <li>• Linear motors</li> <li>• Moving coils</li> </ul>
Current control	<ul style="list-style-type: none"> <li>• Fully digital</li> <li>• Sinusoidal with vector control</li> <li>• Programmable PI control filter based on a pair of PI controls of AC current signals and constant power at high speed</li> </ul>
Current loop bandwidth	< 2.5 kHz
Current sampling time	Programmable 70 - 100 $\mu$ sec
Current sampling rate	Up to 16 kHz; default 11 kHz

### 4.3.2. Velocity Loop

Feature	Details
Controller type	PI
Velocity control	<ul style="list-style-type: none"> <li>Fully digital</li> <li>Programmable PI and FFW control filters</li> <li>"On-the-fly" gain scheduling</li> <li>Automatic, manual and advanced manual tuning</li> </ul>
Velocity and position feedback options	<ul style="list-style-type: none"> <li>Incremental Encoder</li> <li>Absolute Encoder- Heidenhain and Stegmann</li> <li>Digital Halls</li> <li>Interpolated Analog (sin/cos) Encoder (optional)</li> <li>Resolver (optional)</li> <li>Tachometer and Potentiometer (optional)</li> </ul>
Velocity loop bandwidth	< 350 Hz
Velocity sampling time	140 to 200 $\mu$ sec (x2 current loop sample time)
Velocity sampling rate	Up to 8 kHz; default 5.5 kHz
Velocity command options	<ul style="list-style-type: none"> <li>Analog</li> <li>Internally calculated by either jogging or step</li> </ul> <p><b>Note:</b> All software-calculated profiles support on-the-fly changes.</p>

### 4.3.3. Position Loop

Feature	Details
Controller type	"1-2-4" PIP
Position command options	<ul style="list-style-type: none"> <li>Software</li> <li>Pulse and Direction</li> <li>Analog Potentiometer</li> </ul>
Position loop bandwidth	< 80 Hz
Position sampling time	280 to 400 $\mu$ sec (x 4 current loop sample time)
Position sampling rate	Up to 4 kHz; default 2.75 kHz

## 4.4. Feedbacks

The Eagle can receive and process feedback input from diverse types of devices.

### 4.4.1. Feedback Supply Voltage

The Eagle has two feedback ports (main and auxiliary). The drives supply voltage to the main and auxiliary feedback devices (200 mA to the main feedback and 200 mA to the auxiliary feedback).

Feature	Details
Main encoder supply voltage	5 V $\pm$ 5% @ 200 mA
Auxiliary encoder supply voltage	5 V $\pm$ 5% @ 200 mA

### 4.4.2. Main Feedback Options

#### 4.4.2.1. Incremental Encoder Input

Feature	Details
Encoder format	<ul style="list-style-type: none"> <li>• A, B and Index</li> <li>• Differential</li> <li>• Quadrature</li> </ul>
Interface	RS-422
Input resistance	Differential: 120 $\Omega$
Maximum incremental encoder frequency	Maximum absolute: 5 MHz pulses
Minimum quadrature input period ( $P_{IN}$ )	112 ns
Minimum quadrature input high/low period ( $P_{HL}$ )	56 ns
Minimum quadrature phase period ( $P_{PH}$ )	28 ns
Maximum encoder input voltage range	Common mode: $\pm$ 7 V Differential mode: $\pm$ 7 V

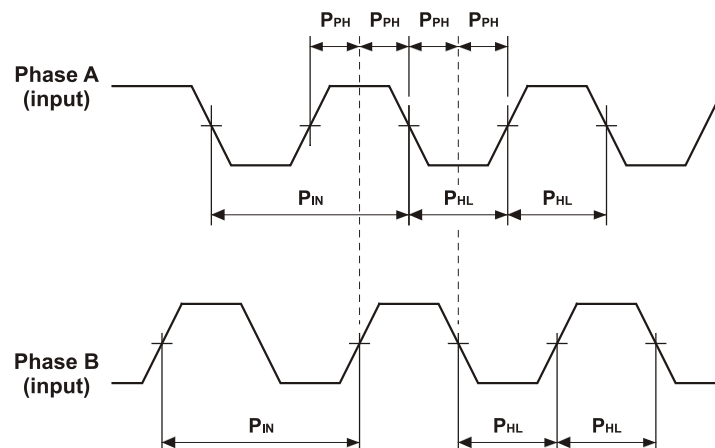


Figure 31: Main Feedback - Encoder Phase Diagram

#### 4.4.2.2. Digital Halls

Feature	Details
Halls inputs	<ul style="list-style-type: none"> <li>• H<sub>A</sub>, H<sub>B</sub>, H<sub>C</sub>.</li> <li>• Single-ended inputs</li> <li>• Built in hysteresis of 1 V for noise immunity</li> </ul>
Input voltage	Nominal operating range: $0\text{ V} < V_{\text{In\_Hall}} < 5\text{ V}$ Maximum absolute: $-1\text{ V} < V_{\text{In\_Hall}} < 15\text{ V}$ High level input voltage: $V_{\text{InHigh}} > 2.5\text{ V}$ Low level input voltage: $V_{\text{InLow}} < 1\text{ V}$
Input current	Sink current (when input pulled to the common): 3 mA
Maximum frequency	$f_{\text{MAX}} : 2\text{ kHz}$

#### 4.4.2.3. Interpolated Analog (Sine/Cosine) Encoder

Feature	Details
Analog encoder format	Sine and Cosine signals
Analog input signal level	<ul style="list-style-type: none"> <li>• Offset voltage: 2.2 V to 2.8 V</li> <li>• Differential, 1 V peak to peak</li> </ul>
Input resistance	Differential 120 $\Omega$
Maximum analog signal frequency	$f_{\text{MAX}} : 250\text{ kHz}$
Interpolation multipliers	Programmable: x4 to x4096
Maximum "counts" frequency	80 mega-counts/sec "internally"
Automatic errors correction	<ul style="list-style-type: none"> <li>• Signal amplitudes mismatch</li> <li>• Signal phase shift</li> <li>• Signal offsets</li> </ul>
Encoder outputs	See Auxiliary Encoder Outputs specifications (4.4.2.7)

#### 4.4.2.4. Resolver

Feature	Details
Resolver format	<ul style="list-style-type: none"> <li>• Sine/Cosine</li> <li>• Differential</li> </ul>
Input resistance	Differential 2.49 kΩ
Resolution	Programmable: 10 to 15 bits
Maximum electrical frequency (RPS)	512 revolutions/sec
Resolver transfer ratio	0.5
Reference frequency	1/Ts (Ts = sample time in seconds)
Reference voltage	Supplied by the Eagle
Reference current	up to ±50 mA
Encoder outputs	See Auxiliary Encoder Output specifications (4.4.2.7)

#### 4.4.2.5. Tachometer\*

Feature	Details
Tachometer format	Differential
Maximum operating differential voltage for TAC1+, TAC1-	±20 V
Maximum absolute differential input voltage for TAC1+, TAC1-	±25 V
Maximum operating differential voltage for TAC2+, TAC2-	±50 V
Maximum absolute differential input voltage for TAC2+, TAC2-	±50 V
Input resistance for TAC1+, TAC1-	46 kΩ
Input resistance for TAC2+, TAC2-	100 kΩ
Resolution	14 bit

\* Only one Tachometer port can be used at a time (either TAC1+/TAC1- or TAC2+/TAC2-).  
 TAC1+/TAC1- is used in applications with having a Tachometer of less than 20 V.  
 TAC2+/TAC2- is used in applications with having a Tachometer of between 20 V and 50 V.

#### 4.4.2.6. Potentiometer

Feature	Details
Potentiometer Format	Single-ended
Operating Voltage Range	0 to 5 V supplied by the Eagle
Potentiometer Resistance	100 $\Omega$ to 1 k $\Omega$ ... above this range, linearity is affected detrimentally
Input Resistance	100 k $\Omega$
Resolution	14 bit

#### 4.4.2.7. Absolute Encoder

Feature	Details
Analog encoder format	Sine and Cosine signals
Analog input signal level	<ul style="list-style-type: none"> <li>• Offset voltage: 2.2 V – 2.8 V</li> <li>• Differential, 1 V peak to peak</li> </ul>
Input resistance	Differential 120 $\Omega$
Maximum analog signal frequency	$f_{MAX}$ : 250 kHz
Interpolation multipliers	Programmable: x4 to x4096
Maximum "counts" frequency	80 mega-counts/sec "internally"
Automatic errors correction	<ul style="list-style-type: none"> <li>• Signal amplitudes mismatch</li> <li>• Signal phase shift</li> <li>• Signal offsets</li> </ul>
Encoder outputs	See Encoder Outputs specifications (4.4.2.8)



#### 4.4.2.8. Encoder Outputs

Feature	Details
Encoder output format	<ul style="list-style-type: none"> <li>• A, B, Index (not available in analog and absolute encoders)</li> <li>• Differential outputs</li> <li>• Quadrature</li> </ul>
Interface	RS-422
Port B1 output current capability	<ul style="list-style-type: none"> <li>• Driving differential loads of 200 <math>\Omega</math> on INDEX/INDEX-, CHB/CHB- and CHA/CHA- pairs</li> </ul>
Port B2 output current capability	<ul style="list-style-type: none"> <li>• INDEXO/INDEXO-, CHBO/CHBO- and CHAO/CHAO- pairs are not loaded</li> </ul>
Available as options	<ul style="list-style-type: none"> <li>• Two simultaneous buffered outputs of main-incremental encoder input</li> <li>• Two simultaneous emulated encoder outputs of analog or absolute encoder input</li> <li>• Two simultaneous emulated encoder outputs of resolver input</li> <li>• Buffered output of auxiliary input</li> </ul>
Maximum frequency	$f_{MAX}$ : 5 MHz pulses/output
Index (marker)	Length of pulse is one quadrature (one quarter of an encoder cycle) and synchronized to A&B

### 4.4.3. Auxiliary Port

Feature	Details
Encoder input, emulated output, pulse and direction	<ul style="list-style-type: none"> <li>• A, B, Index</li> <li>• Differential or single-ended</li> <li>• Quadrature</li> </ul>
Output current capability	120 $\Omega$
Available as options	<ul style="list-style-type: none"> <li>• Emulated encoder outputs of analog encoder</li> <li>• Emulated encoder outputs of the resolver</li> <li>• Emulated encoder outputs of the potentiometer</li> <li>• Emulated encoder outputs of the tachometer</li> <li>• Main encoder buffered output</li> <li>• P&amp;D buffered output</li> <li>• Emulated encoder outputs of the absolute encoder</li> </ul>
Maximum frequency	$f_{MAX}$ : 5 MHz pulses/output
Edge separation between A & B	Programmable number of clocks to allow adequate noise filtering at remote receiver of emulated encoder signals
Index (marker):	Length of pulse is one quadrature (one quarter of an encoder cycle) and synchronized to A&B

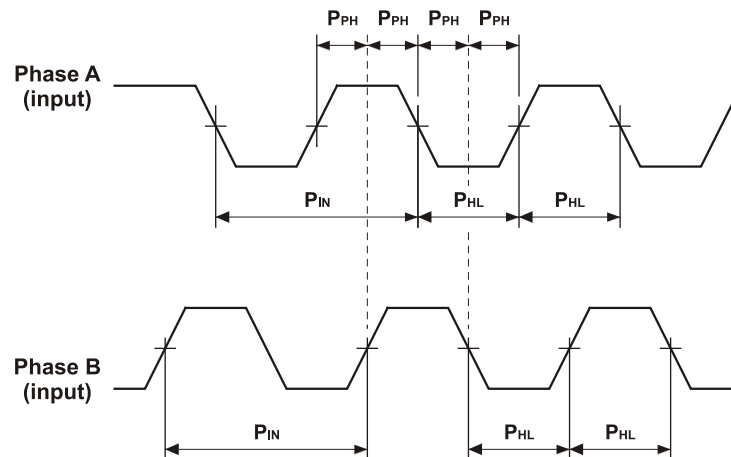




Figure 32: Auxiliary Feedback - Encoder Phase Diagram

## 4.5. I/Os



The Eagle has:

- 6 Digital Inputs
- 2 Digital Outputs
- 1 Analog Input

### 4.5.1. Digital Input Interfaces

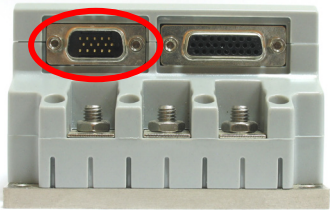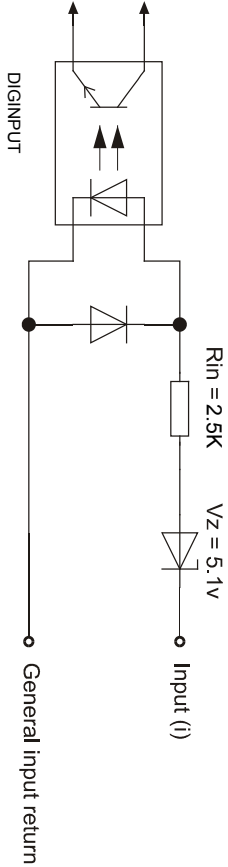Feature	Details	Connector Location
Type of input	<ul style="list-style-type: none"> <li>• Optically isolated</li> <li>• Single-ended</li> <li>• PLC level</li> </ul>	  <p style="text-align: center;"><b>Digital Input Schematic</b></p>
Input current	$I_{in} = \frac{V_{in} - 6.5V}{2500\Omega}$ <p>* <math>I_{in} = 2.2\text{ mA}</math> for <math>V_{in} = 12\text{ V}</math></p>	
Input current for high speed inputs	$I_{in} = \frac{V_{in} - 6.5V}{1250\Omega}$ <p>* <math>I_{in} = 4.4\text{ mA}</math> for <math>V_{in} = 12\text{ V}</math></p>	
High-level input voltage	$12\text{ V} < V_{in} < 30\text{ V}$ , 24 V typical	
Low-level input voltage	$0\text{ V} < V_{in} < 6.5\text{ V}$	
Minimum pulse width	$> 4 \times TS$ , where TS is sampling time	
Execution time (all inputs): the time from application of voltage on input until execution is complete	<p>If input is set to one of the built-in functions — Home, Inhibit, Hard Stop, Soft Stop, Hard and Soft Stop, Forward Limit, Reverse Limit or Begin — execution is immediate upon detection: <math>0 &lt; T &lt; 4 \times TS</math></p> <p>If input is set to General input, execution depends on program. Typical execution time: <math>\cong 0.5\text{ msec.}</math></p>	
High-speed inputs – 5 & 6 minimum pulse width, in high-speed mode	<p><math>T &lt; 5\ \mu\text{sec}</math></p> <p><b>Notes:</b></p> <ul style="list-style-type: none"> <li>• Home mode is high-speed mode and can be used for fast capture and precise homing</li> <li>• High speed input has a digital filter set to same value as digital filter (EF) of main encoder</li> <li>• Highest speed is achieved when turning on optocouplers</li> </ul>	

### 4.5.2. Digital Output Interface

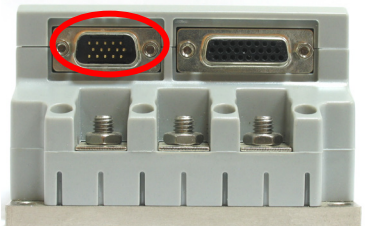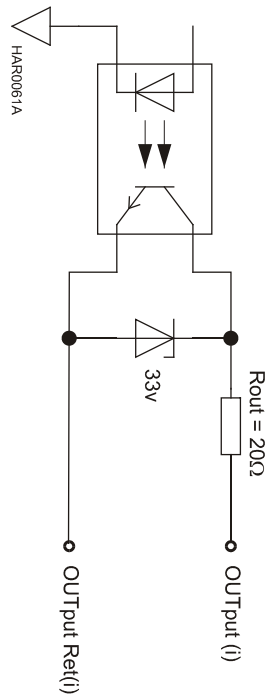Feature	Details	Connector Location
Type of output	<ul style="list-style-type: none"> <li>Optically isolated</li> <li>Open collector and open emitter</li> </ul>	  <p><b>Digital Output Schematic</b></p>
Maximum supply output (VCC)	30 V	
Max. output current $I_{out (max)} (V_{out} = Low)$	$I_{out (max)} \leq 15 \text{ mA}$	
VOL at maximum output voltage (low level)	$V_{out (on)} \leq 0.3 \text{ V} + 0.02 * I_{out (mA)}$	
$R_L$	<p>The external resistor <math>R_L</math> must be selected to limit the output current to no more than 15 mA.</p> $R_L = \frac{VCC - VOL}{I_{out (max)}}$	
Executable time	<p>If output is set to one of the built-in functions — Home flag, Brake or AOK — execution is immediate upon detection: <math>0 &lt; T &lt; 4 \times TS</math></p> <p>If output is set to General output and is executed from a program, the typical time is approximately 0.5 msec.</p>	

### 4.5.3. Analog Input

Feature	Details
Maximum operating differential voltage	± 10 V
Maximum absolute differential input voltage	± 16 V
Differential input resistance	3.74 kΩ
Analog input command resolution	14-bit

## 4.6. Communications

Specification	Details
<b>RS-232</b>	<b>Signals:</b> <ul style="list-style-type: none"> <li>• RxD , TxD , GND</li> <li>• Full duplex, serial communication for setup and control</li> <li>• Baud Rate of 9,600 to 57,600 bit/sec</li> </ul>
<b>CAN</b>	<b>CAN bus Signals:</b> <ul style="list-style-type: none"> <li>• CAN_H, CAN_L, CAN_GND</li> <li>• Maximum Baud Rate of 1 Mbit/sec</li> </ul> <b>Version:</b> <ul style="list-style-type: none"> <li>• DS 301 V4.01</li> </ul> <b>Device Profile</b> (drive and motion control): <ul style="list-style-type: none"> <li>• DS 402</li> </ul>

## 4.7. Pulse-Width Modulation (PWM)

Feature	Details
PWM resolution	12-bit
PWM switching frequency on the load	2/Ts (factory default 22 kHz on the motor)

## 4.8. Compliance with Standards

Specification	Details
<b>Quality Assurance</b>	
ISO 9001:2008	Quality Management
<b>Design</b>	
Approved IEC/EN 61800-5-1, Safety	Printed wiring for electronic equipment (clearance, creepage, spacing, conductors sizing, etc.)
MIL-HDBK- 217F	Reliability prediction of electronic equipment (rating, de-rating, stress, etc.)
<ul style="list-style-type: none"> <li>• UL 60950</li> <li>• IPC-D-275</li> <li>• IPC-SM-782</li> <li>• IPC-CM-770</li> <li>• UL 508C</li> <li>• UL 840</li> </ul>	Printed wiring for electronic equipment (clearance, creepage, spacing, conductors sizing, etc.)
In compliance with VDE0160-7 (IEC 68)	Type testing
<b>Safety</b>	
Recognized UL 508C	Power Conversion Equipment
In compliance with UL 840	Insulation Coordination Including Clearances and Creepage Distances for Electrical Equipment
In compliance with UL 60950	Safety of Information Technology Equipment Including Electrical Business Equipment
Approved IEC/EN 61800-5-1, Safety	Adjustable speed electrical power drive systems
In compliance with EN 60204-1	Low Voltage Directive 73/23/EEC

Specification	Details
<b>EMC</b>	
Approved <b>IEC/EN 61800-3, EMC</b>	Adjustable speed electrical power drive systems
In compliance with <b>EN 55011</b> Class A with <b>EN 61000-6-2</b> : Immunity for industrial environment, according to: <b>IEC 61000-4-2</b> / criteria B <b>IEC 61000-4-3</b> / criteria A <b>IEC 61000-4-4</b> / criteria B <b>IEC 61000-4-5</b> / criteria B <b>IEC 61000-4-6</b> / criteria A <b>IEC 61000-4-8</b> / criteria A <b>IEC 61000-4-11</b> / criteria B/C	Electromagnetic compatibility (EMC)
<b>Workmanship</b>	
In compliance with <b>IPC-A-610</b> , level 3	Acceptability of electronic assemblies
<b>PCB</b>	
In compliance with <b>IPC-A-600</b> , level 2	Acceptability of printed circuit boards
<b>Packing</b>	
In compliance with <b>EN 100015</b>	Protection of electrostatic sensitive devices
<b>Environmental</b>	
In compliance with <b>2002/96/EC</b>	Waste Electrical and Electronic Equipment regulations (WEEE) <b>Note:</b> Out-of-service Elmo drives should be sent to the nearest Elmo sales office.
In compliance with <b>2002/95/EC</b> (effective July 2006)	Restrictions on Application of Hazardous Substances in Electric and Electronic Equipment (RoHS)